

SECTION 4: INSTALLATION

4-1 Introduction

This section describes mounting, wiring, startup and miscellaneous testing details associated with the IQ Analyzer. Earlier sections, especially Sections 1 and 2, should be reviewed prior to installing the IQ Analyzer.



WARNING

INSURE THAT ANY INCOMING AC POWER OR FOREIGN POWER SOURCES ARE TURNED OFF AND LOCKED OUT BEFORE PERFORMING ANY WORK ON THE IQ ANALYZER OR ITS ASSOCIATED EQUIPMENT. FAILURE TO OBSERVE THIS PRACTICE COULD RESULT IN SERIOUS INJURY, DEATH OR EQUIPMENT DAMAGE. THE ONLY EXCEPTION IS WHEN

CONNECTING OR DISCONNECTING RIBBON CABLES AT J2 OR J3. THIS CAN BE DONE AT ANY TIME IF CARE IS EXERCISED.



WARNING

DO NOT HIGH-POT OR MEGGER THIS DEVICE.

4-2 Panel Preparation

Panel preparation and mounting of the IQ Analyzer is described for the standard “Flush Mounted Approach” and the optional “Flange Mounted Approach.” The flange mounted approach is used when depth behind the panel is too limited to accommodate the IQ Analyzer (Figure 4-1). The panel mounted flange permits most of the IQ Analyzer depth to extend from the panel front.

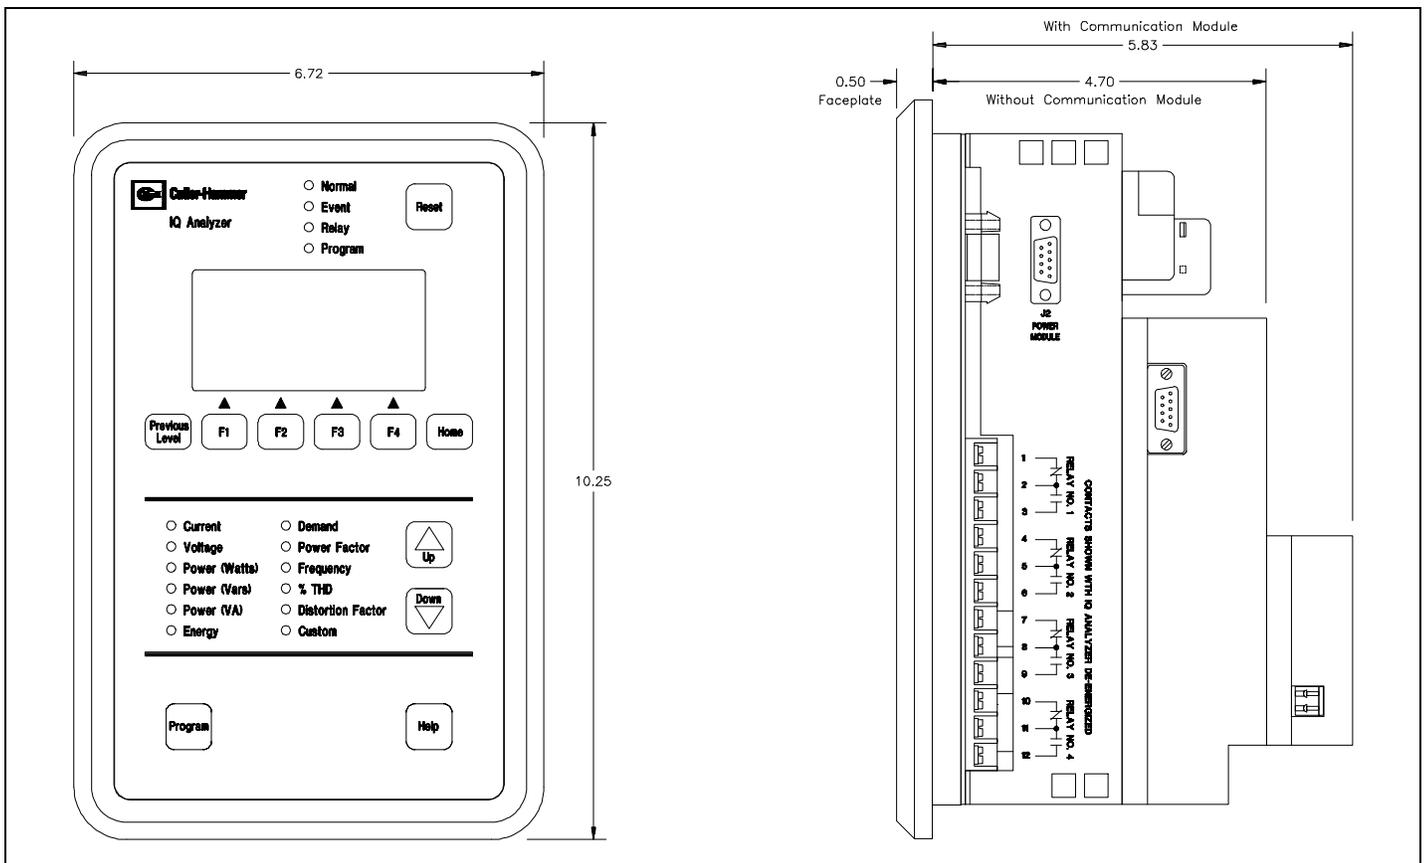


Figure 4-1. IQ Analyzer Dimensions and Cutout (inches)

- Use the Power Module as a drilling template at the new mounting location.
- Use the two removed 8-32 screws to remount the Power Module in properly drilled and tapped holes.

NOTICE

When field installing an IPONI (INCOM Product Operated Network Interface) or EPONI (Ethernet PONI), carefully follow all the installation instructions supplied with the product.

4-2.3 Optional Flange Mounted Cutout and Mounting

When flange mounting the IQ Analyzer, the cutout and mounting guidelines presented in paragraphs 4-2.1 and 4-2.2 should be followed, except for the drilling pattern. Refer to Figure 4-4 for the flange mounted drilling pattern. The cutout opening in the panel when flange mounting is somewhat larger than the flush mounted cutout. This slightly larger opening facilitates flange mounted wiring. The flange permits an additional 2.5 inches of IQ Analyzer depth to protrude beyond the enclosure door (Figure 4-5).

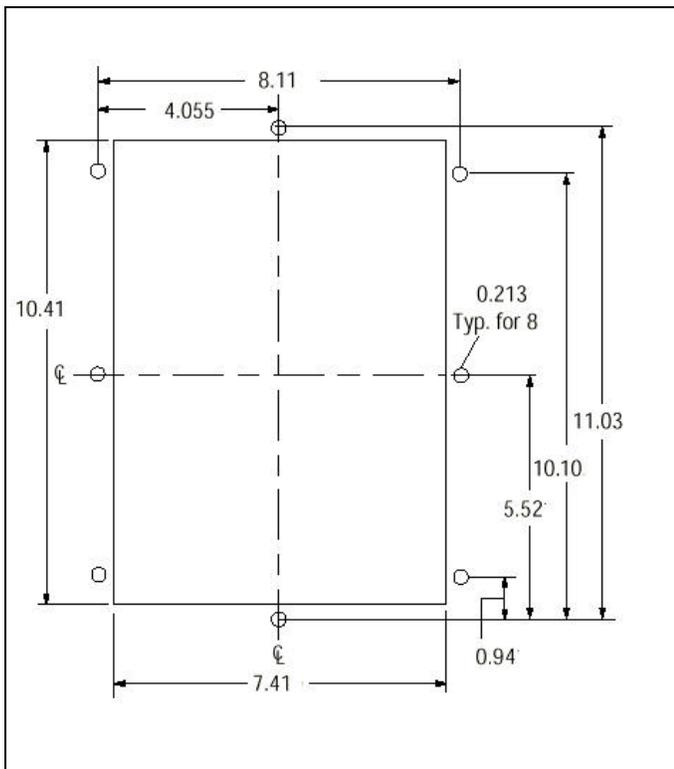



Figure 4-4. Flange Mounted Drilling Pattern (inches)

4-3 Wiring

Wiring of the IQ Analyzer must follow a suitable Wiring Plan Drawing. The phase Wiring Plan, as used here, refers to the drawings made for the specific application. It describes all electrical connections between the IQ Analyzer and external equipment. This drawing is made by the user or OEM. A network wiring diagram can also be helpful for networked systems (Figure 4-6). Specific IQ Analyzer Wiring Diagrams are useful when creating the overall Wiring Plan Drawing. IQ Analyzer Wiring Diagrams for each system possibility are addressed in Paragraph 4-3.2. Specific IQ Analyzer connection points are identified in Figures 4-7 and 4-8.



Figure 4-5. IQ Analyzer Shown Mounted Using a Mounting Flange

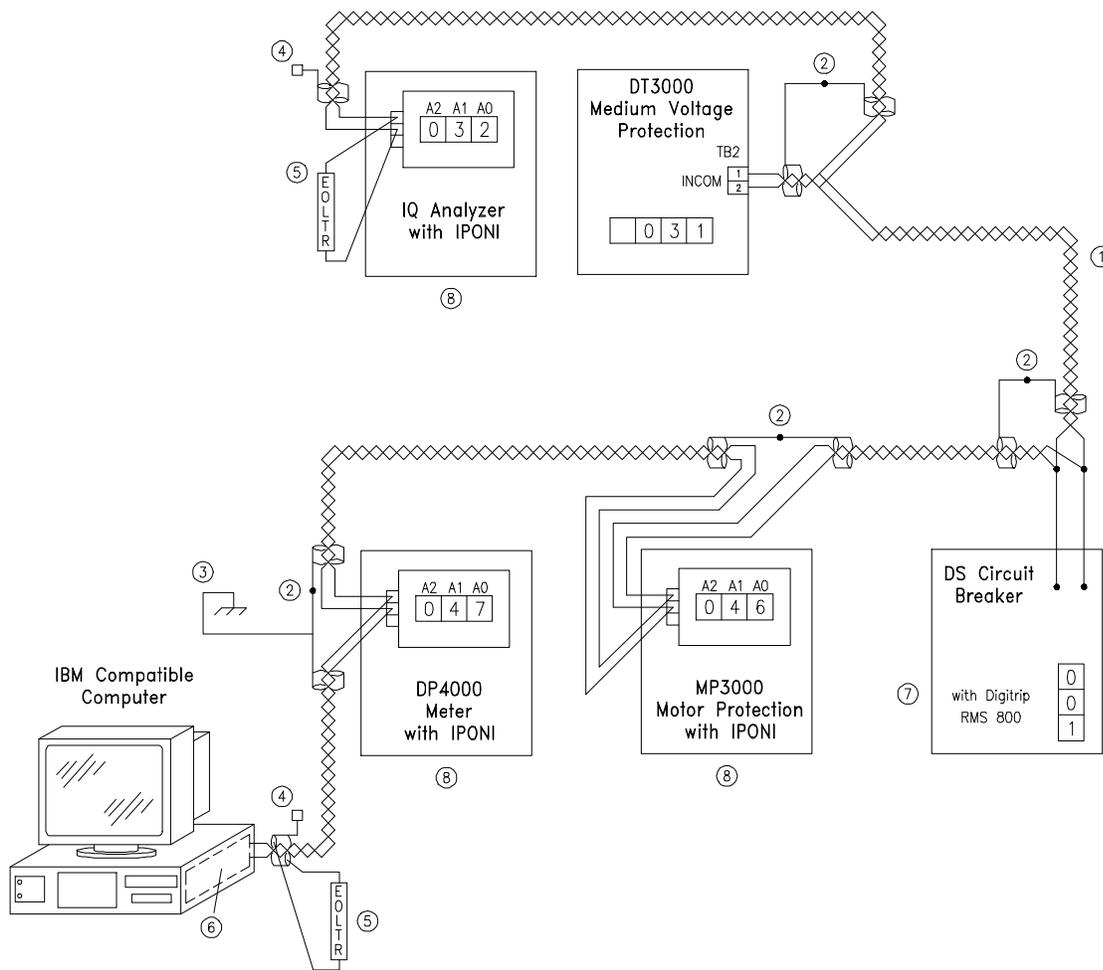

- ① For network interconnection cable, use Belden 9463 or Cutler–Hammer IMPCABLE.
- ② When interconnecting devices, tie shield drain wires together for shield path continuity.
- ③ Connect the shield path to a solid earth ground at one point only.
- ④ On last device in network, tape shield drain wire back upon cable.
- ⑤ Use a 1/2 watt carbon or metal film resistor at each end of the network as an end of line termination resistor (EOLTR). EOLTR should be 100 ohms for 9600 baud communication rate networks or 150 ohms for 1200 baud communication rate networks.
- ⑥ Network interconnection to computer requires use of an IMPACC master (CONI or MINT).
- ⑦ On 9600 baud networks, Digitrip RMS 700/800 devices must be placed on AEM subnetwork.
- ⑧ Devices without built-in communications require network interface module (IPONI).

For detailed network wiring specifications, contact our website at www.cutlerhammer.eaton.com
or contact Power Management Application Support at 1-800-809-2772

Figure 4-6. Typical Network Wiring Diagram

NOTICE

If this device is being used on a single phase system, wire to phase A and NEU.

The following general considerations should be complied with during the wiring process.

1. All wiring must conform to applicable Federal, State and Local codes.
2. The wires to the terminal blocks must not be larger than AWG No. 14. Larger wire will not connect properly to the terminal block. Larger size wires, however, can be used for CT connections with the use of appropriate ring terminals.
3. Terminal blocks have No. 6-32 sems pressure saddle screws.
4. Wiring Diagram contacts are shown in their de-energized position.
5. Because IQ Analyzer monitors the neutral-to-ground voltage, the chassis of the IQ Analyzer must be connected to ground. A good low impedance ground is essential for proper functioning.

4-3.1 Current and Potential Transformer Selection

**WARNING**

PT AND CT SECONDARY CIRCUITS ARE CAPABLE OF GENERATING DANGEROUS VOLTAGES AND CURRENTS WITH THEIR PRIMARY CIRCUITS ENERGIZED, AND COULD CAUSE PERSONAL INJURY AND/OR DEATH.

The proper selection of any required current transformers or potential transformers is critical to the proper and accurate functioning of the IQ Analyzer. Instrumentation grade devices are required. Shorting blocks for CTs and a three-phase switch or circuit breaker for voltage are recommended near the equipment for ease of installation. If assistance with the selection process is desired, contact your Cutler-Hammer representative.

4-3.2 Wiring Diagrams

Figures 4-9 through 4-34 present IQ Analyzer wiring diagrams for the different system possibilities.

4-4 Initial Startup

The information here is intended to be used when first applying control power to the IQ Analyzer.

4-4.1 Before Power Application

**WARNING**

STARTUP PROCEDURES MUST BE PERFORMED ONLY BY QUALIFIED PERSONNEL WHO ARE FAMILIAR WITH THE IQ ANALYZER AND ITS ASSOCIATED ELECTRICAL AND/OR MECHANICAL EQUIPMENT. FAILURE TO OBSERVE THIS WARNING COULD RESULT IN PERSONAL INJURY, DEATH AND OR EQUIPMENT DAMAGE.

After all installation wiring is complete and before ac power is applied to the IQ Analyzer, perform the following:

- a. Verify that the incoming ac power to the system is disconnected and, if possible, locked out.
- b. Verify that all wiring is correct as shown on the Wiring Plan Drawing and any applicable Wiring Diagrams.
- c. Verify that the case is grounded. Failure to ground the case results in inaccurate and unstable readings.

4-4.2 Initial Power Application

- a. Apply the appropriate ac power to the IQ Analyzer.
- b. After a few seconds, the green Normal LED should begin to blink. This indicates that there is power to the unit and it has passed its own self-diagnostic test.
- c. The absence of a green Normal LED indicates the unit failed its diagnostic test and a reason for the failure message flashes in the display window. If no LED is lit at all, possibly the unit is not being powered. In either case, remove ac power from the unit and refer to the Troubleshooting Guide in Section 7.
- d. The display of "High Neutral Voltage" or "Reverse Sequence" indicates a miswired voltage.

- e. The display of inconsistent per phase power factors indicates either a miswired voltage, current or polarity.

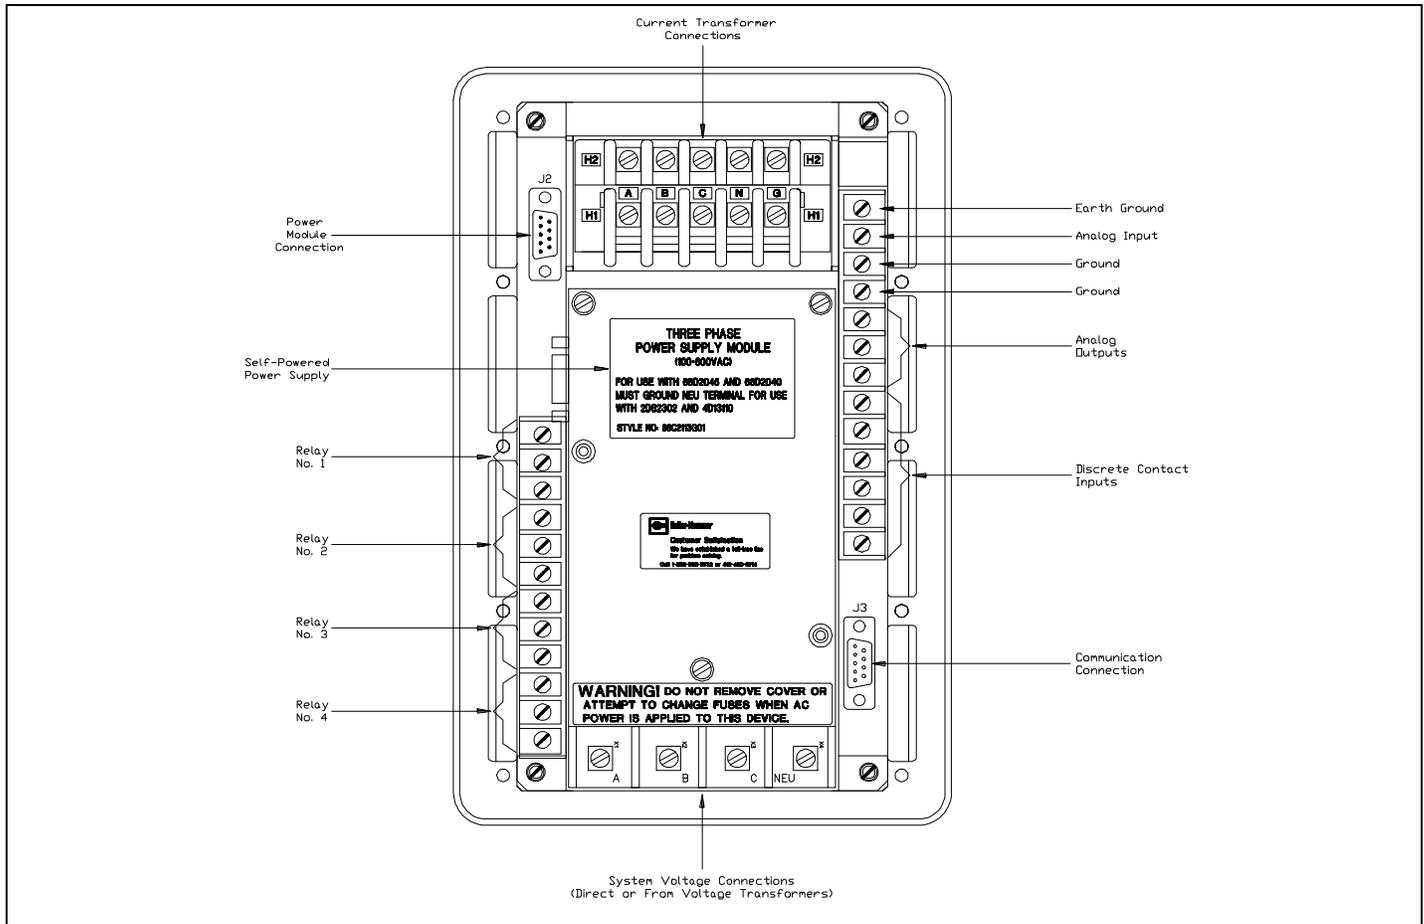


Figure 4-7. IQ Analyzer with Self-Powered Three Phase Power Module (Rear View)

NOTICE

Keep in mind that when an IQ Analyzer is initially powered up for use on a specific system, the displayed “Meter Menu” values may not be what is anticipated for that system. This is because the unit has not yet had necessary pieces of system information programmed into non-volatile memory.

4-5 Quick Start Metering

The intent here is to provide an operator with enough information to get an IQ Analyzer performing basic metering functions quickly without reviewing all the instructions provided in this manual. Whether or not more detailed information is required depends on the

individual operator and the complexity of the application. In any case, it is still strongly recommended that the entire manual be reviewed at the earliest possible convenience to take advantage of the wide array of features offered by IQ Analyzer.

Proceed by reading and completing the following steps:

- Step 1:** Review all applicable material earlier in this section to ensure that the IQ Analyzer is mounted properly and wired in keeping with the appropriate wiring diagram for the application.
- Step 2:** Follow the initial startup instructions presented in paragraph 4-4, paying particular attention to all WARNINGS and NOTICES.

Step 3: Review the use of the display, LEDs and pushbuttons of the Operator Panel in Section

3, especially Program Mode Screens and Meter Menu Screens.

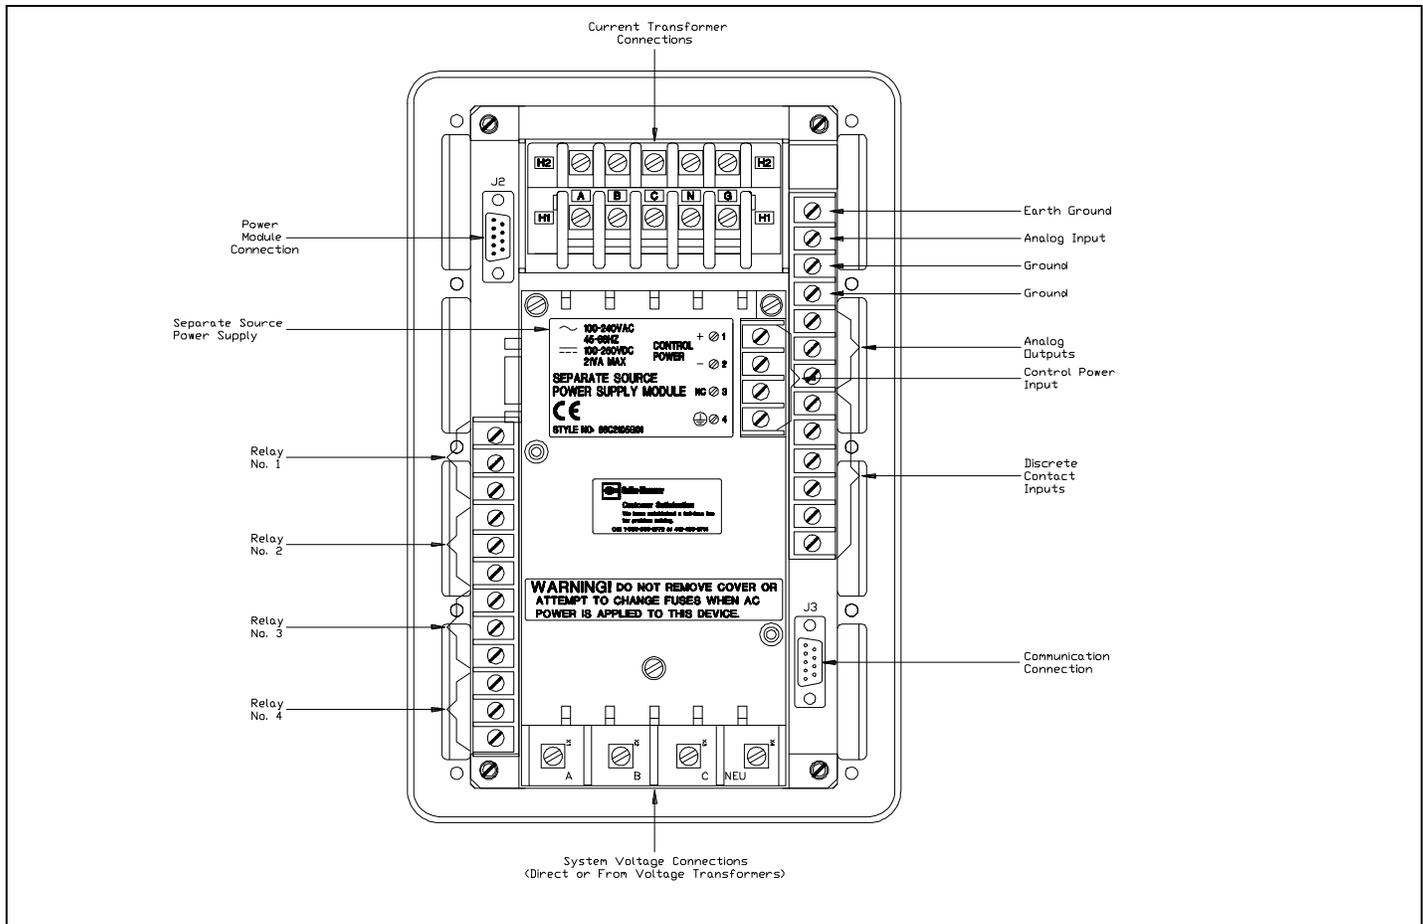


Figure 4-8. IQ Analyzer with Separate Source Power Module (Rear View)

Step 4: Paragraphs 6-1 through 6-2.5 in Section 6, “Programming” provides the required basics for entering and moving around in the Program Mode. Review the material paying particular attention to paragraph 6-2.2, “Password Entry.”

Step 5: Program the General Setup portion of the IQ Analyzer to enable it to begin monitoring the system in which it is applied. To accomplish this, first review the General Setup Screens Tree (Figure 6-4) and General Setup Settings Sheet in Appendix A. This will alert the operator to what information will be required during programming. To facilitate the programming process, make sure that all required information is readily available prior to beginning the actual programming.

Step 6: A review of the simple programming example in section 6-3 will provide the operator with additional familiarization of the programming process, although the intent here is to only program General Setup setpoints.

Step 7: Program the IQ Analyzer with the system information collected in Step 5.

Step 8: Once programming is complete, exit the Program Mode. Table 5.1 outlines the types of displayed parameters available from the Meter Menu.

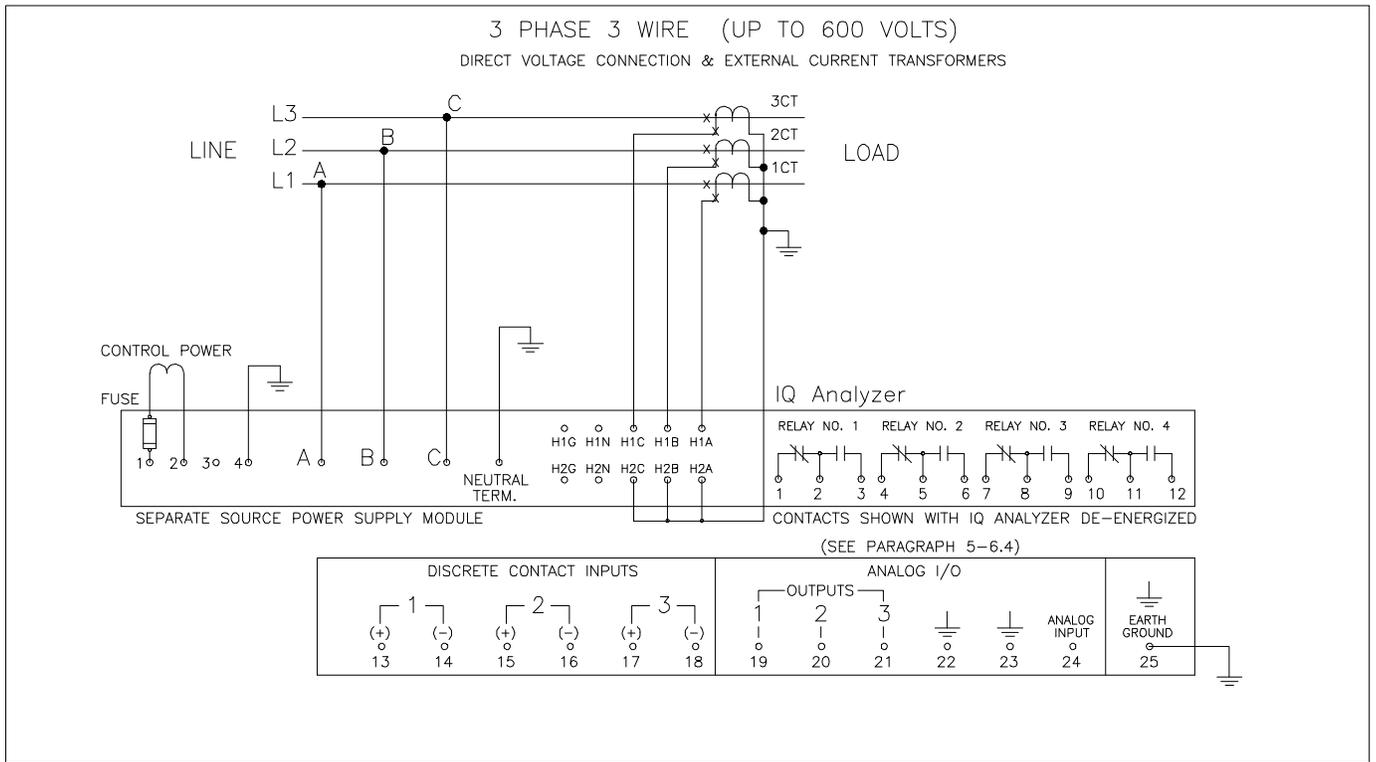


Figure 4-9. 3-phase 3-Wire (Up to 600 Volts) Wiring Diagram

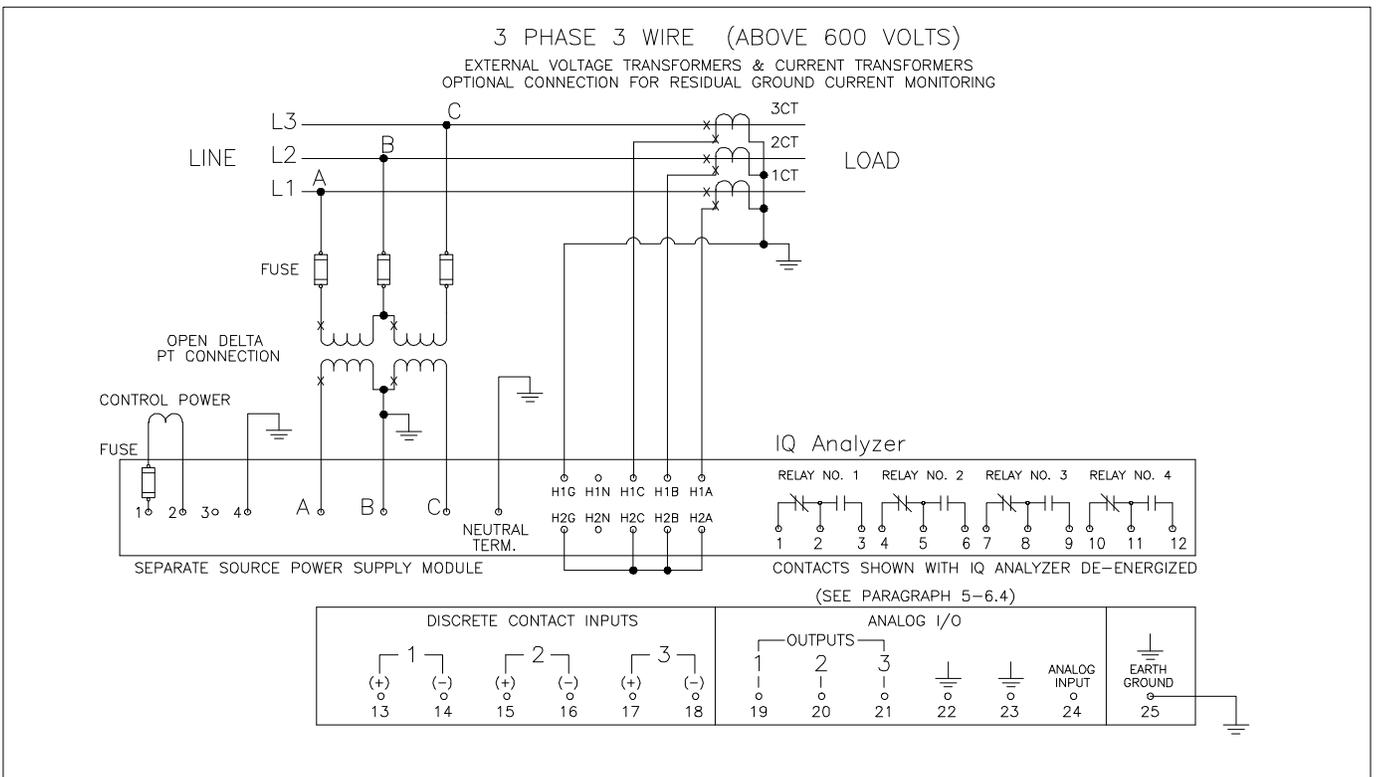


Figure 4-10. 3-phase 3-Wire (Above 600 Volts) Wiring Diagram

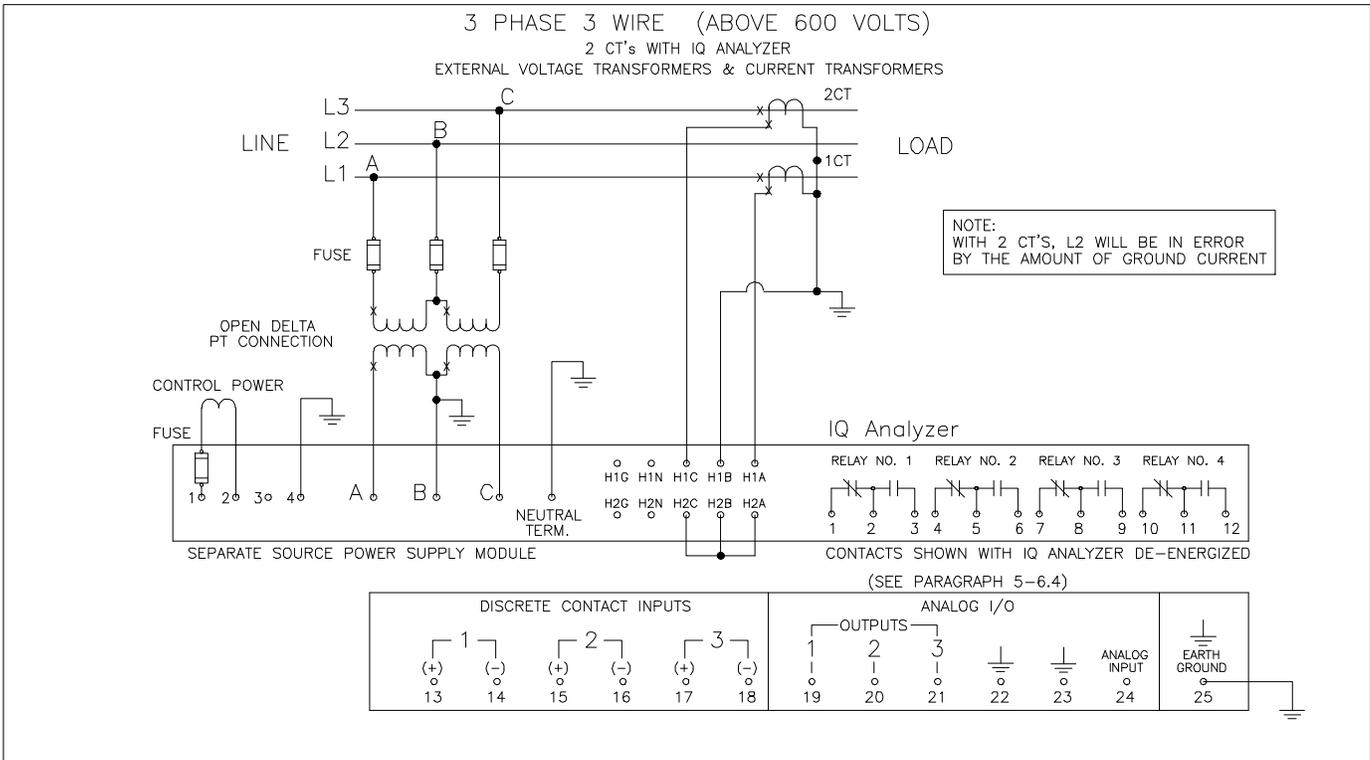


Figure 4-11. 3-phase 3-Wire (Above 600 Volts) Wiring Diagram

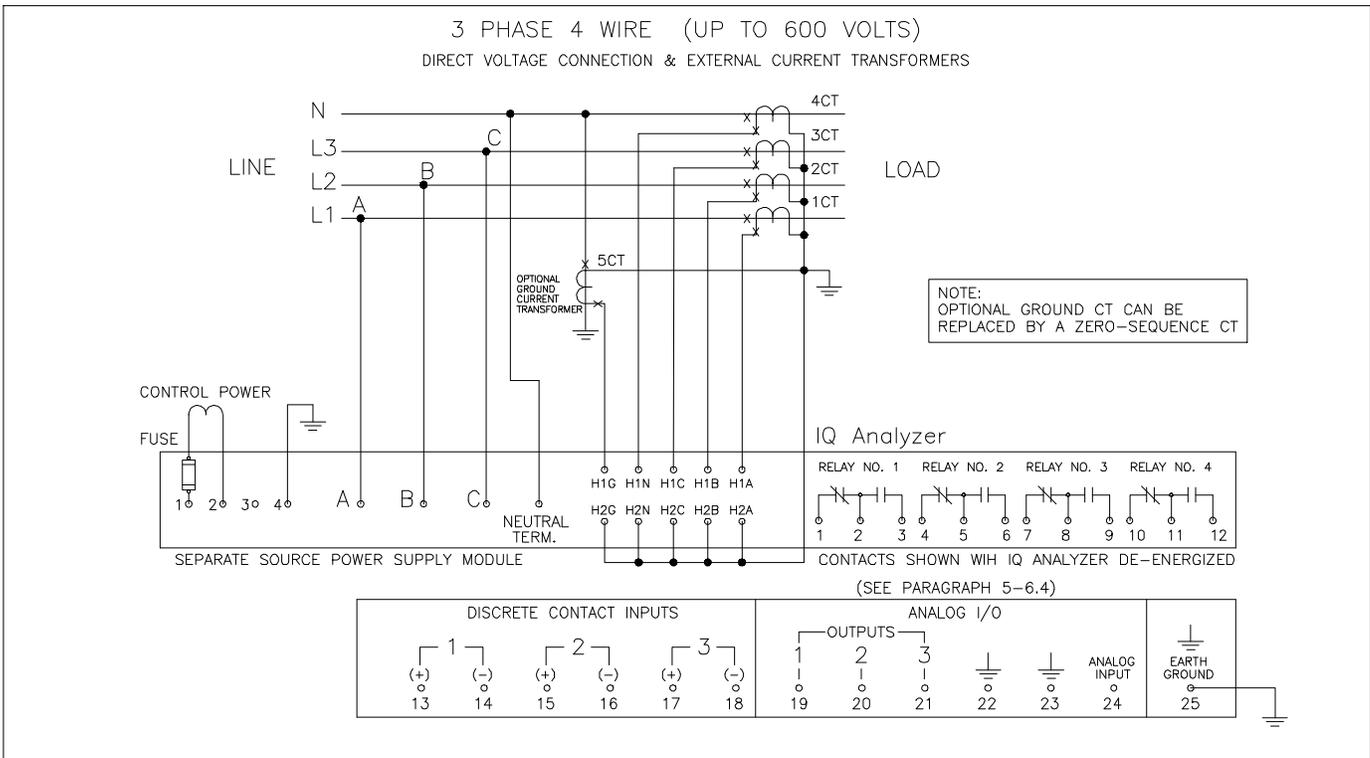


Figure 4-12. 3-phase 4-Wire (Up to 600 Volts) Wiring Diagram

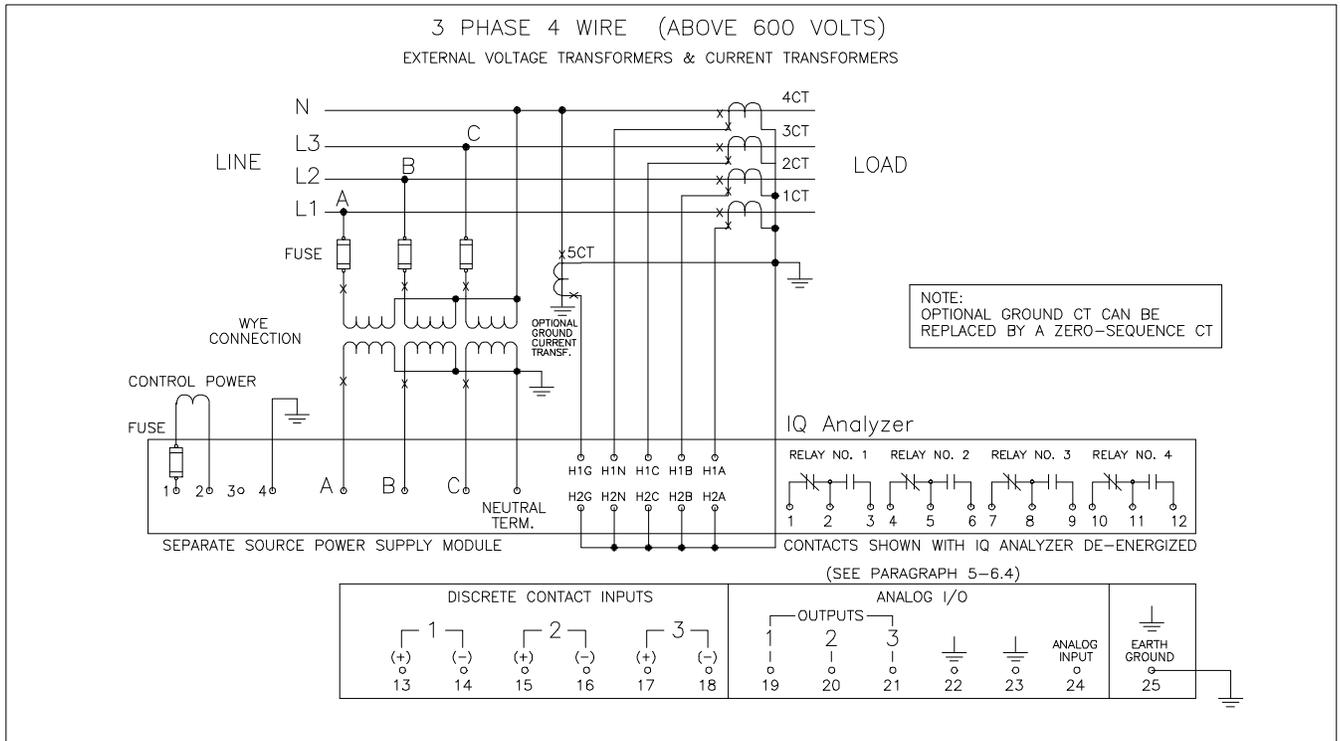


Figure 4-13. 3-phase 4-Wire (Above 600 Volts) Wiring Diagram

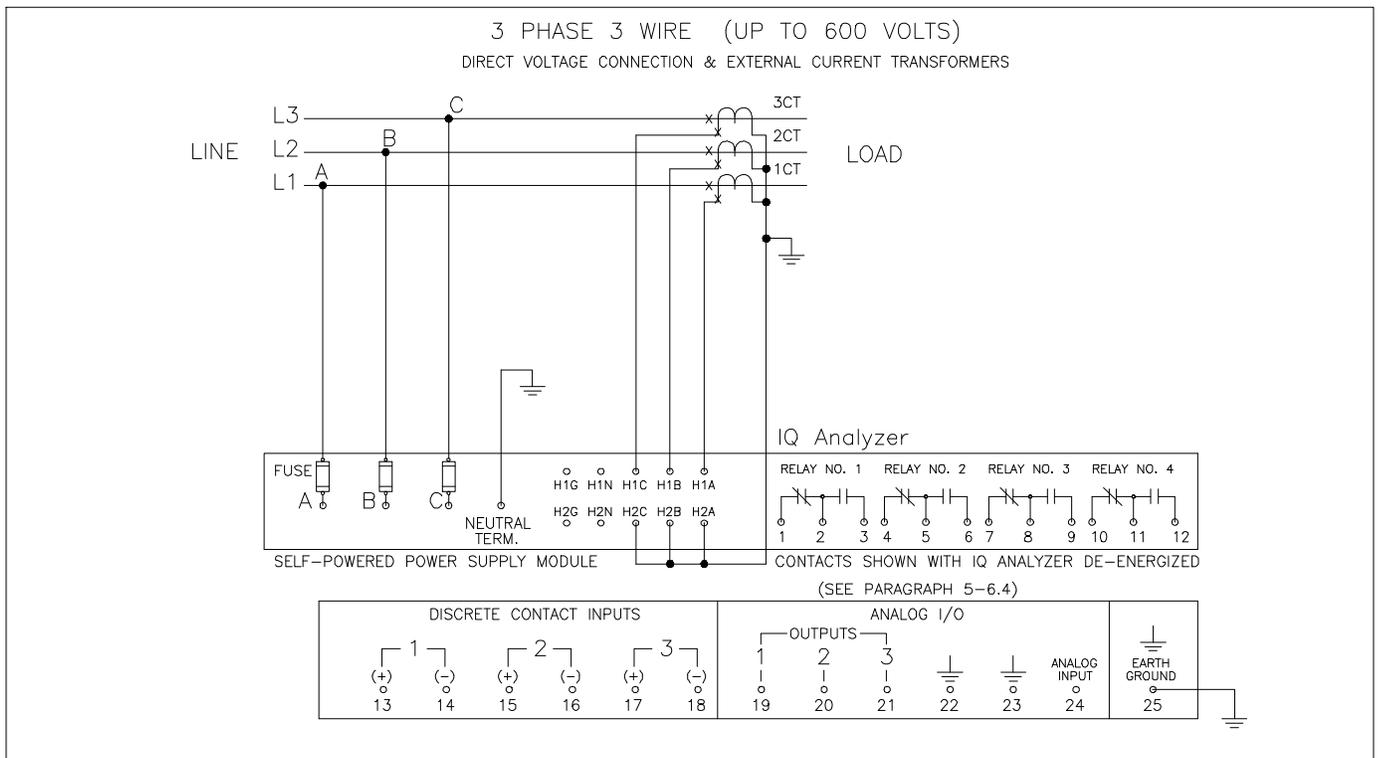


Figure 4-14. 3-phase 4-Wire (96 to 600 Volts) Wiring Diagram

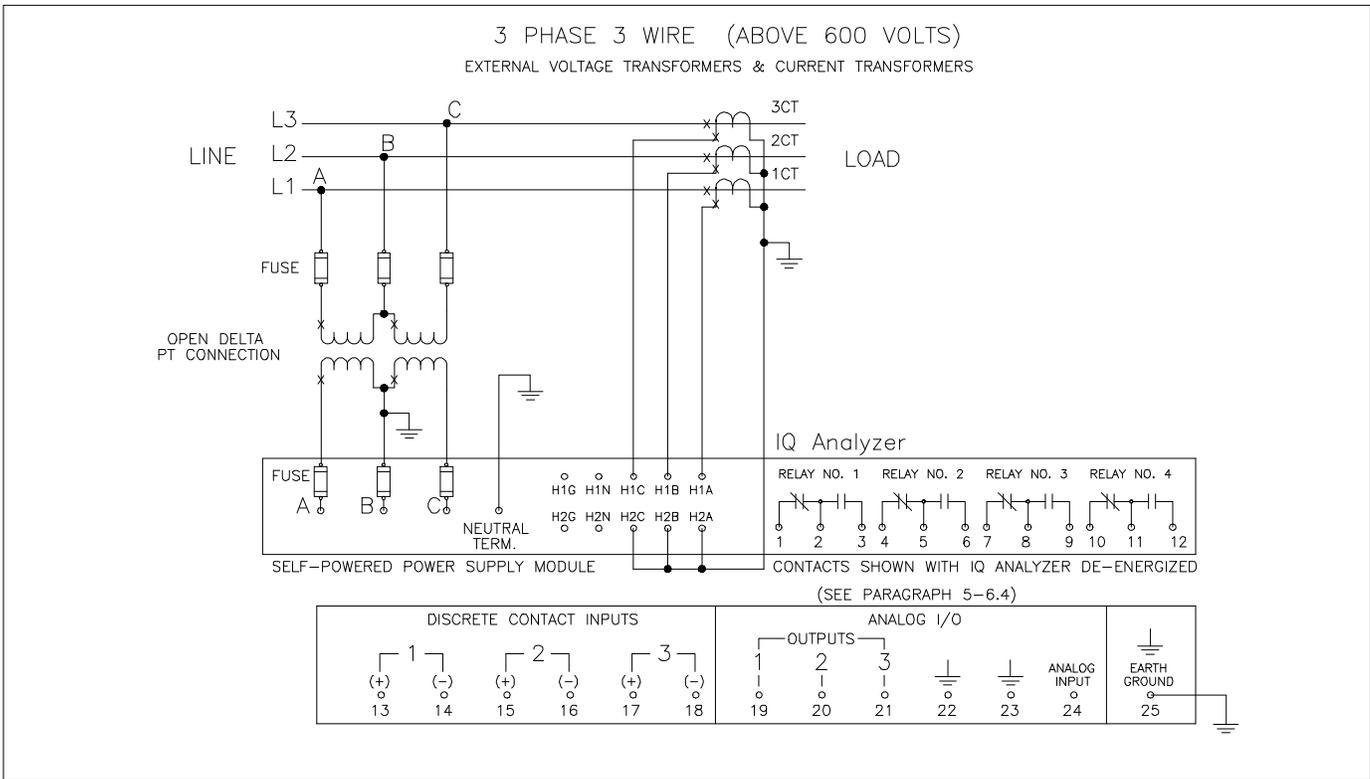


Figure 4-15. 3-phase 3-Wire (Above 600 Volts) Wiring Diagram

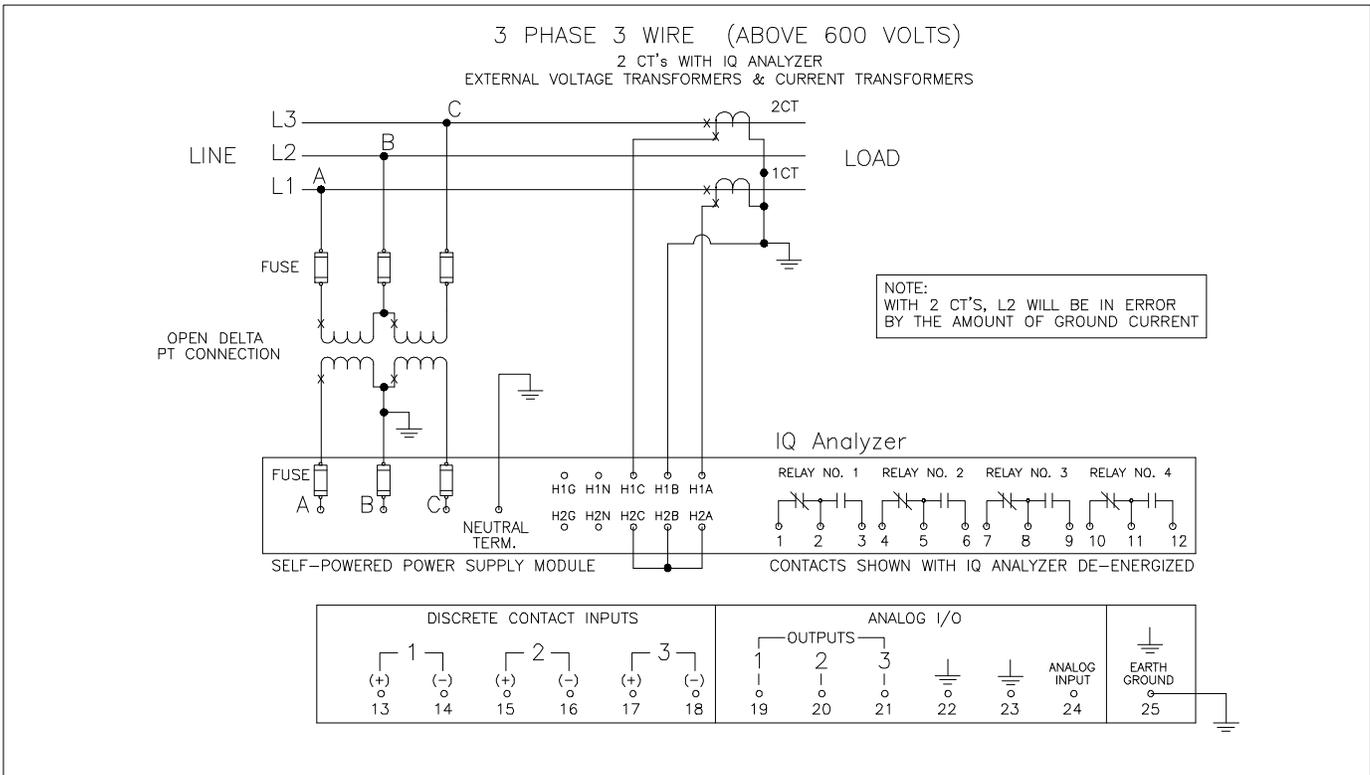


Figure 4-16. 3-phase 3-Wire (Above 600 Volts) Wiring Diagram

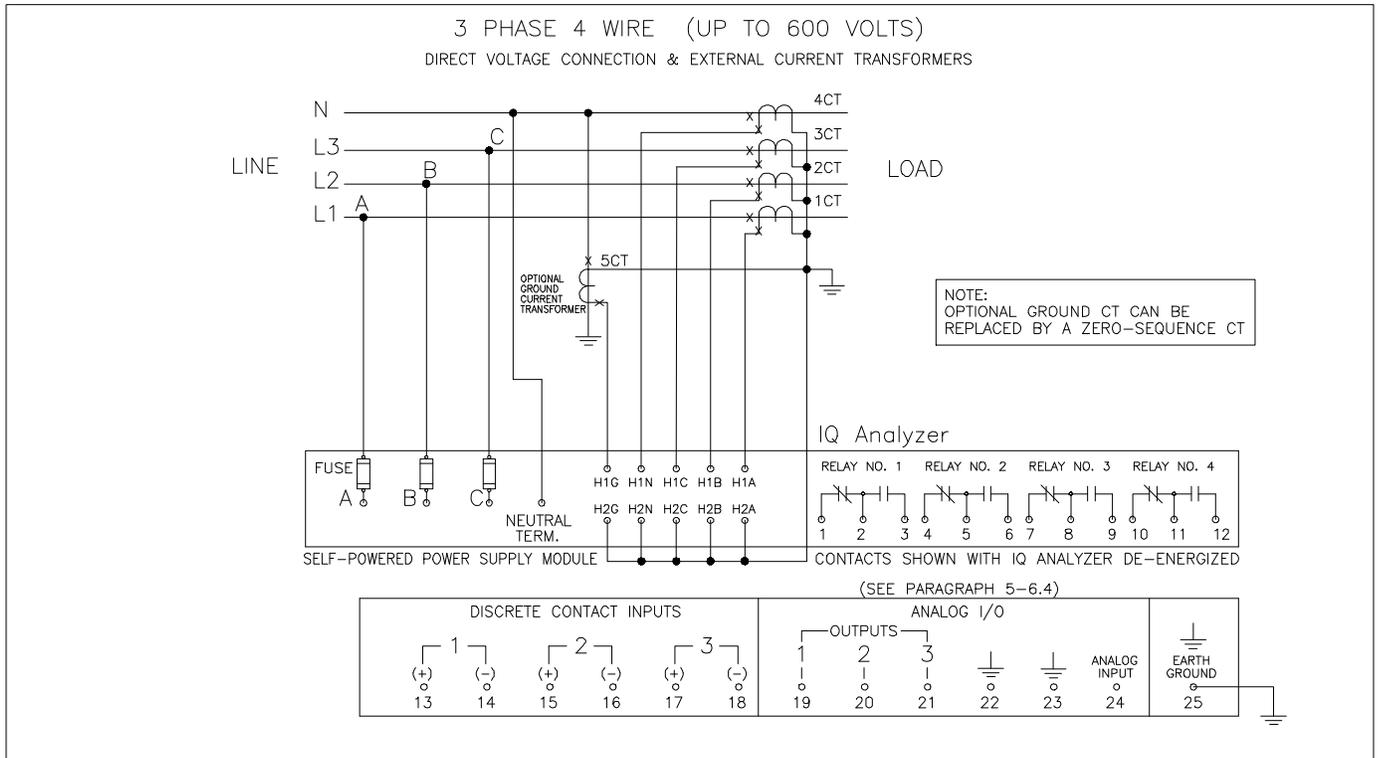


Figure 4-17. 3-phase 4-Wire (96 to 600 Volts) Wiring Diagram

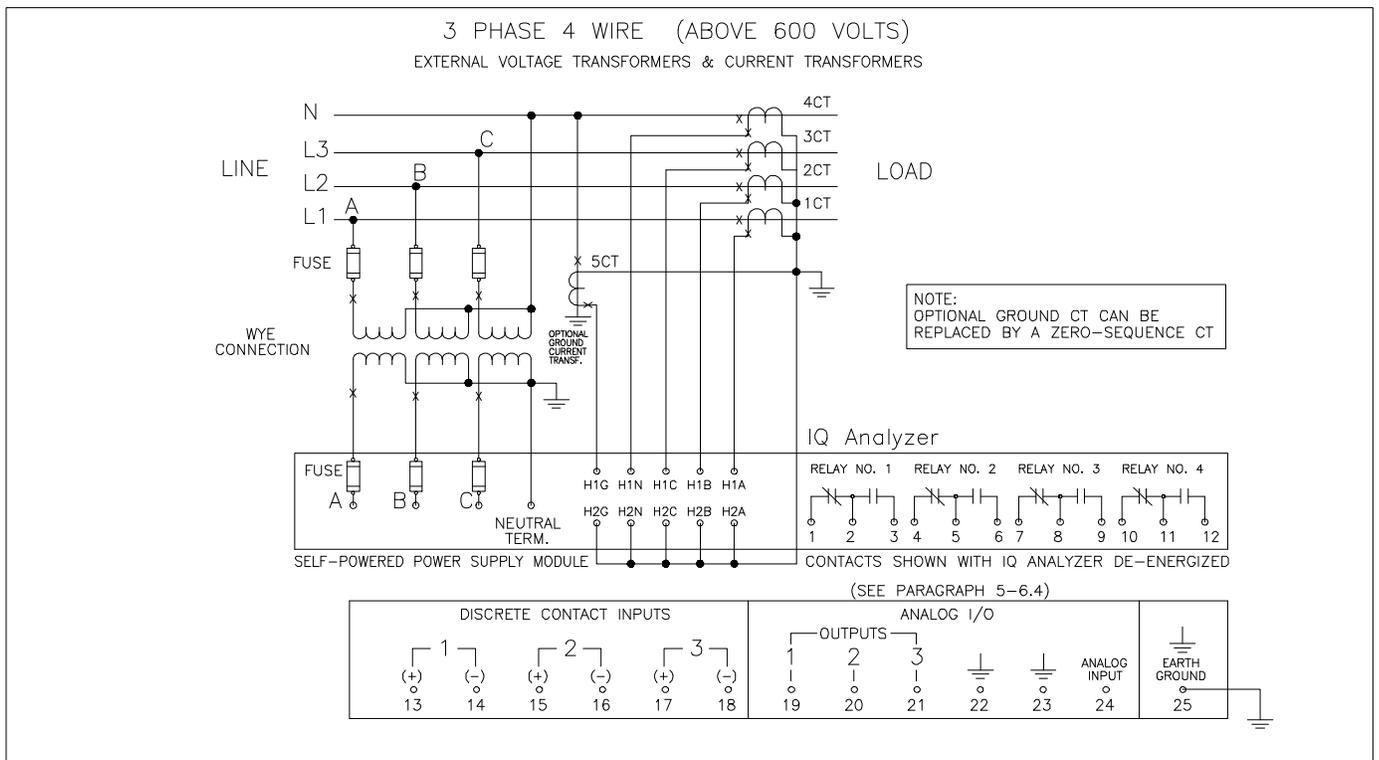


Figure 4-18. 3-phase 4-Wire (Above 600 Volts) Wiring Diagram

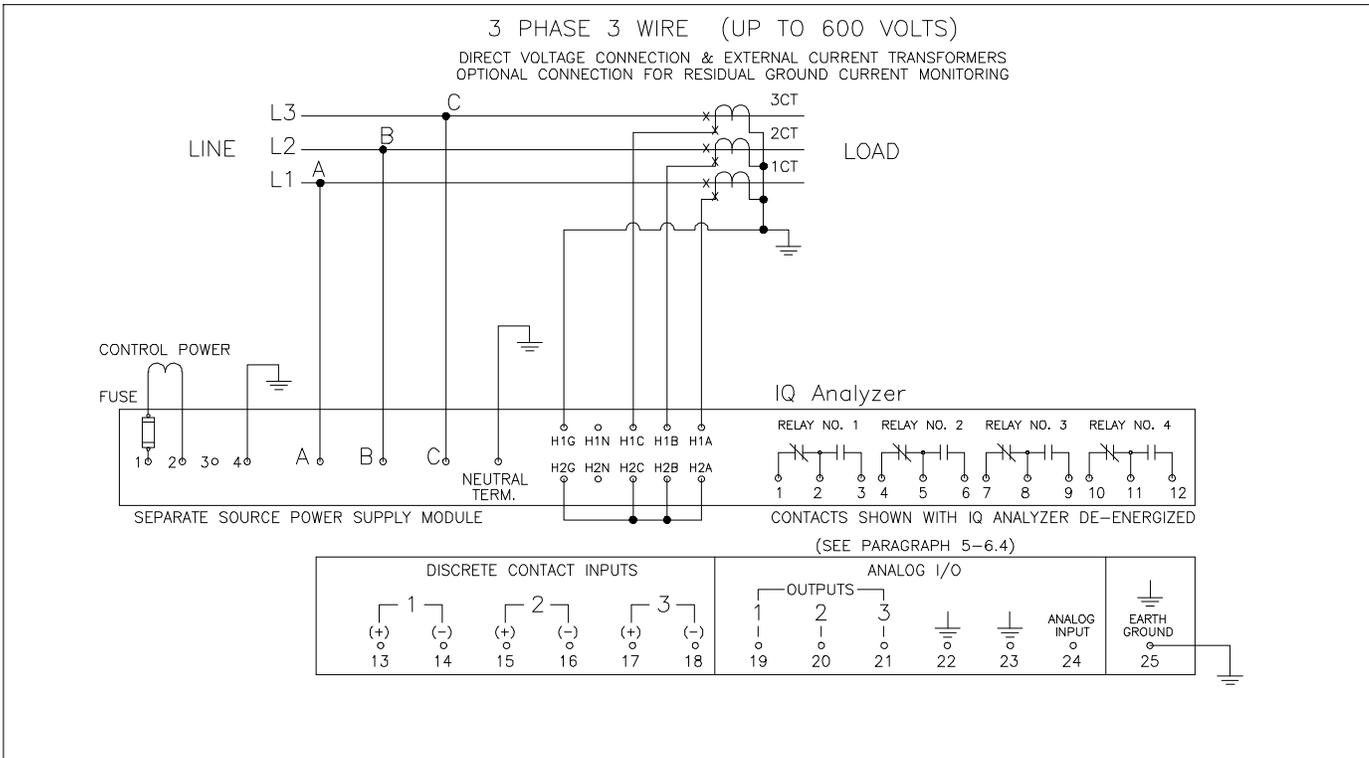


Figure 4-19. 3-phase 3-Wire (Up to 600 Volts) Wiring Diagram

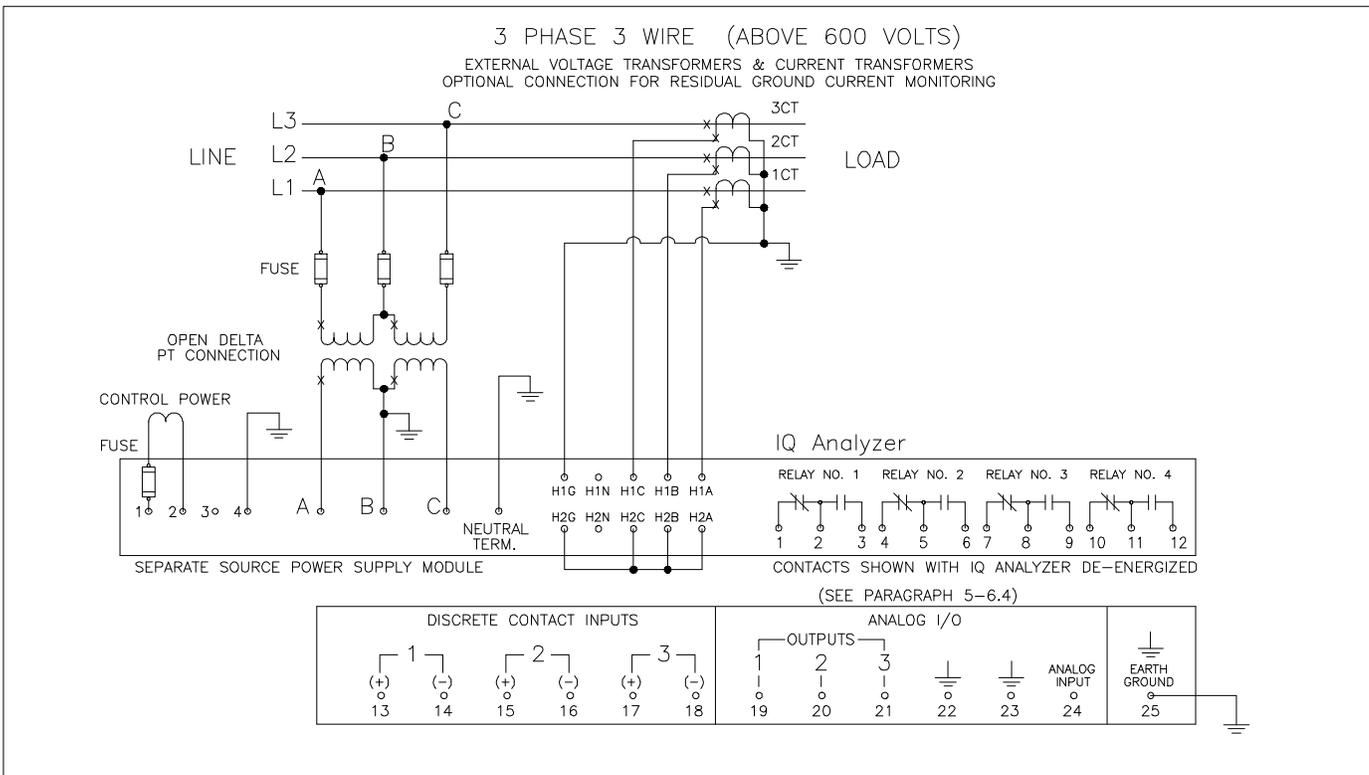


Figure 4-20. 3-phase 3-Wire (Above 600 Volts) Wiring Diagram

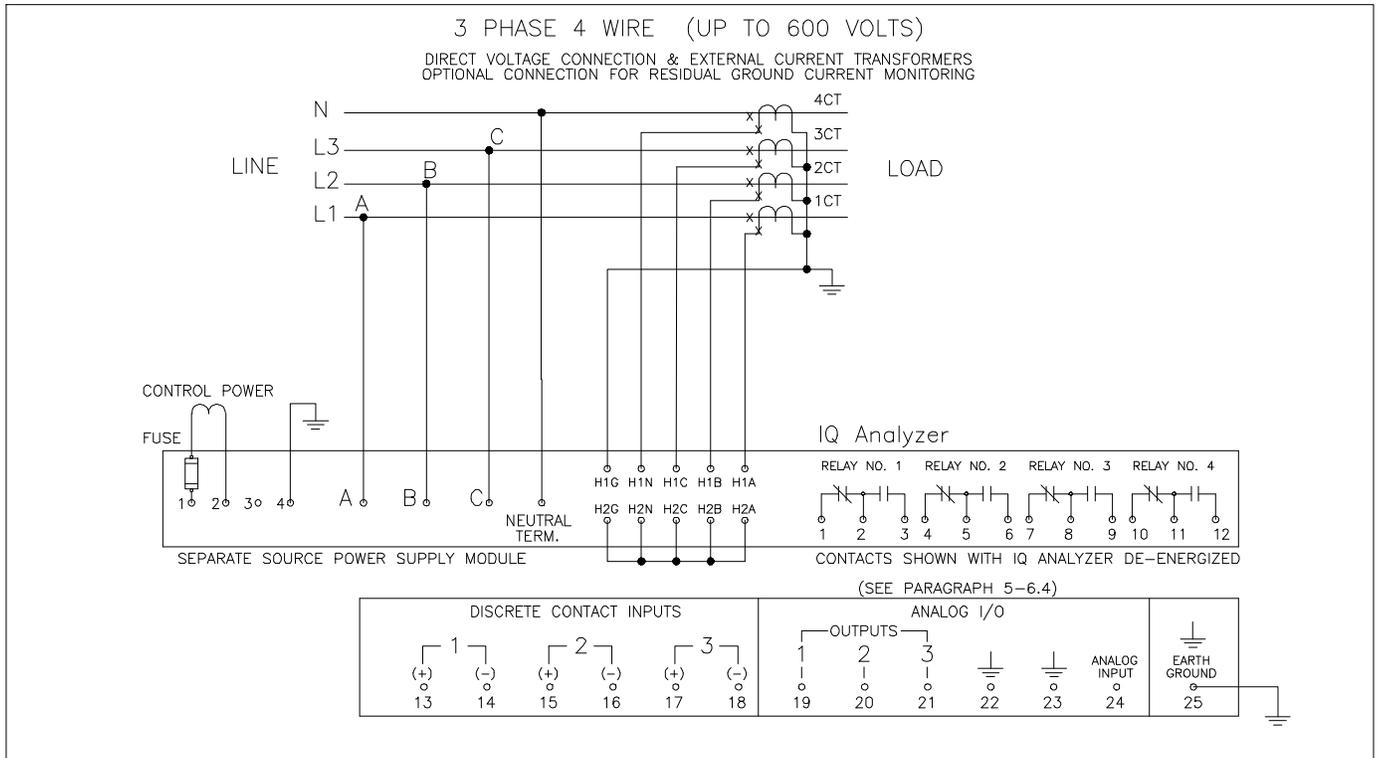


Figure 4-21. 3-phase 4-Wire (Up to 600 Volts) Wiring Diagram

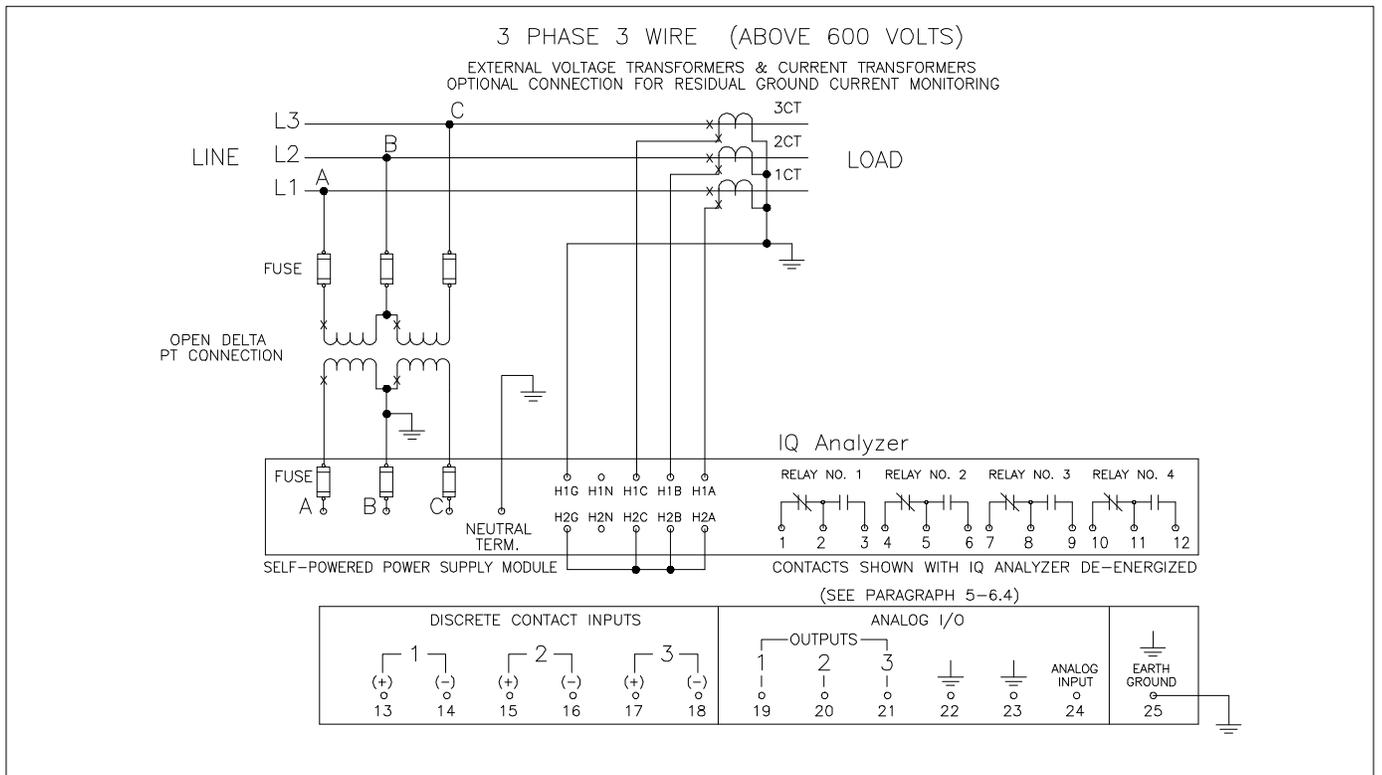


Figure 4-22. 3-phase 4-Wire (Above 600 Volts) Wiring Diagram

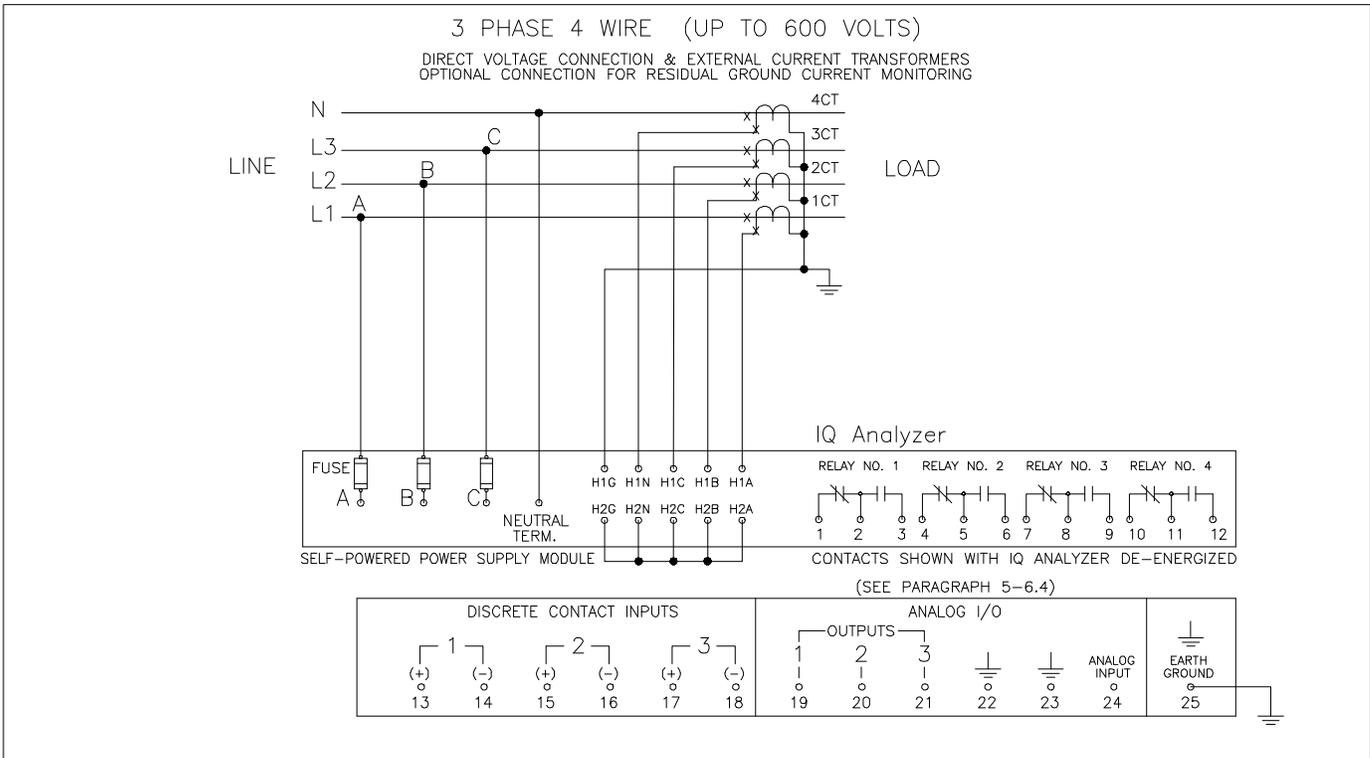


Figure 4-23. 3-phase 3-Wire (Up to 600 Volts) Wiring Diagram

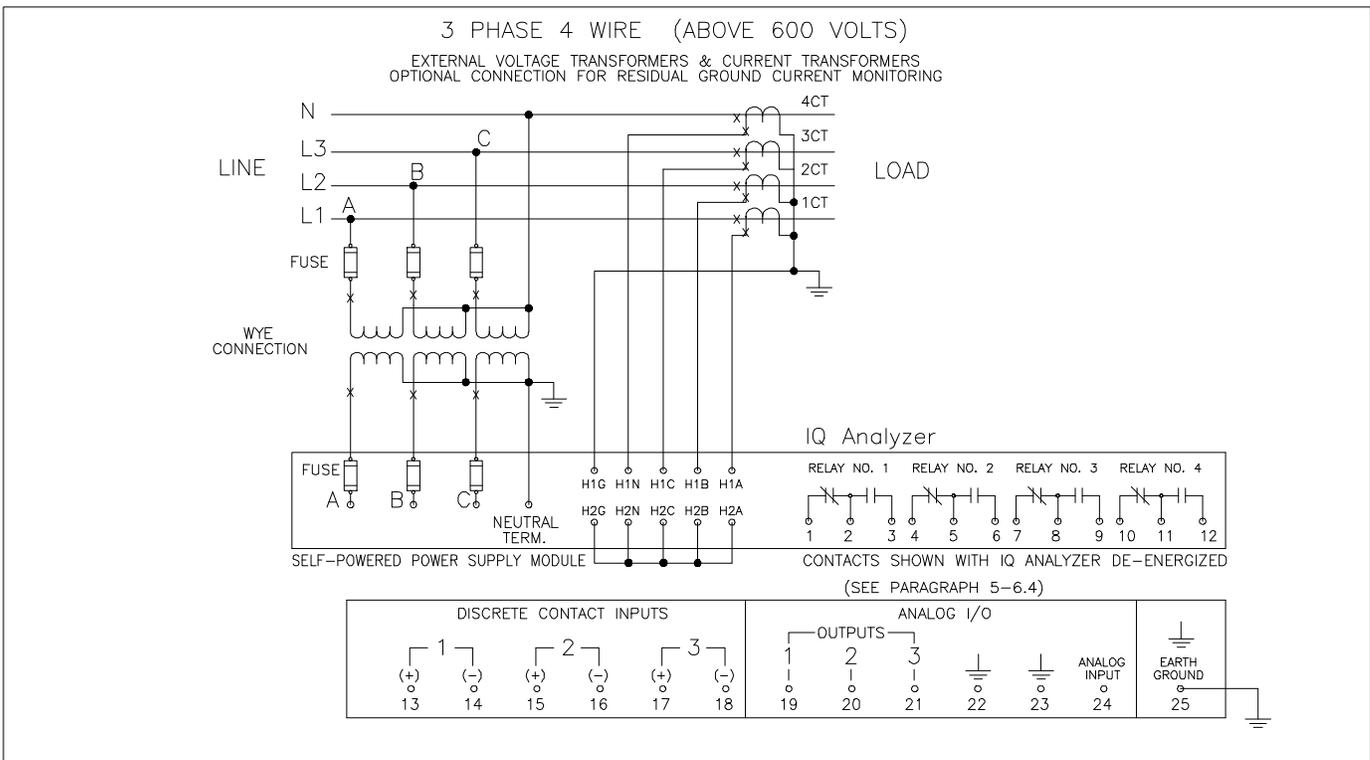


Figure 4-24. 3-phase 3-Wire (Above 600 Volts) Wiring Diagram

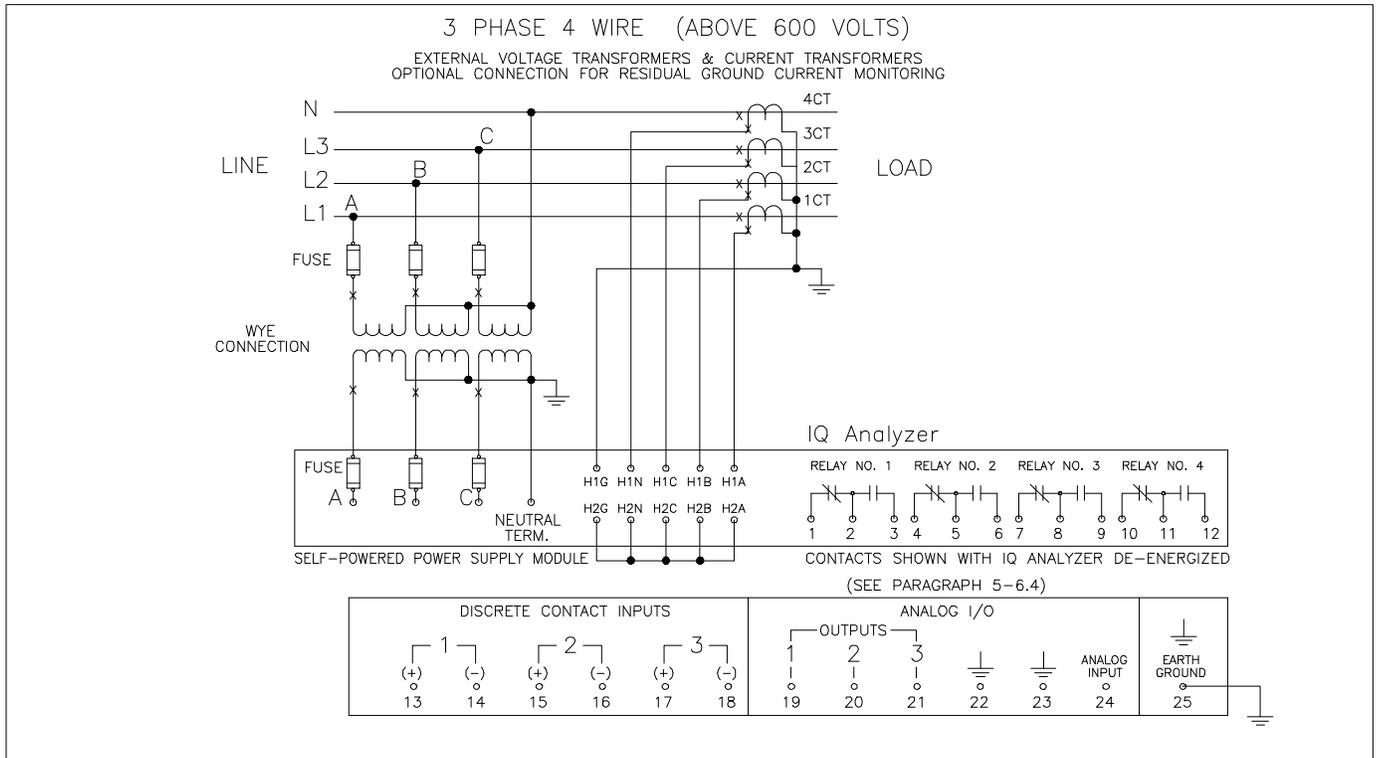


Figure 4-25. 3-phase 4-Wire (Above 600 Volts) Wiring Diagram

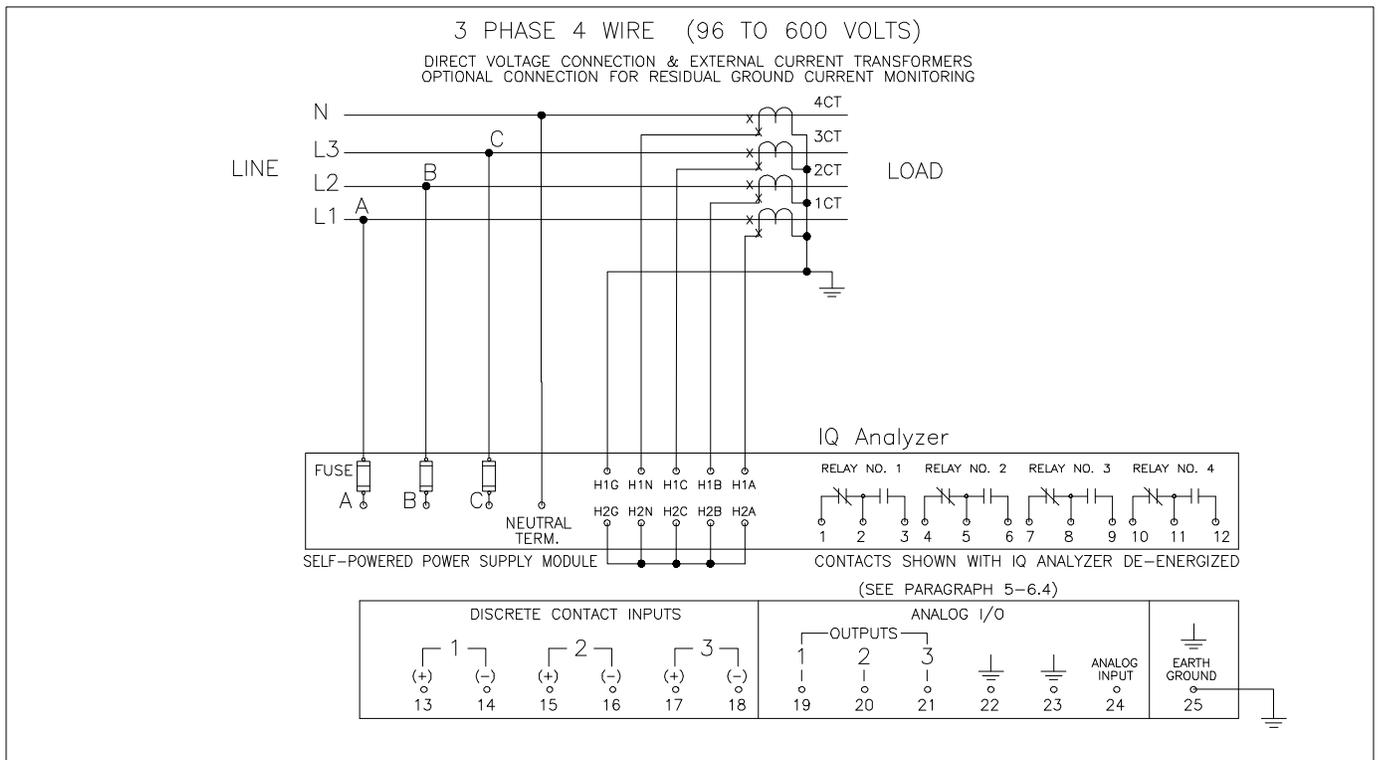


Figure 4-26. 3-phase 4-Wire (96 to 600 Volts) Wiring Diagram

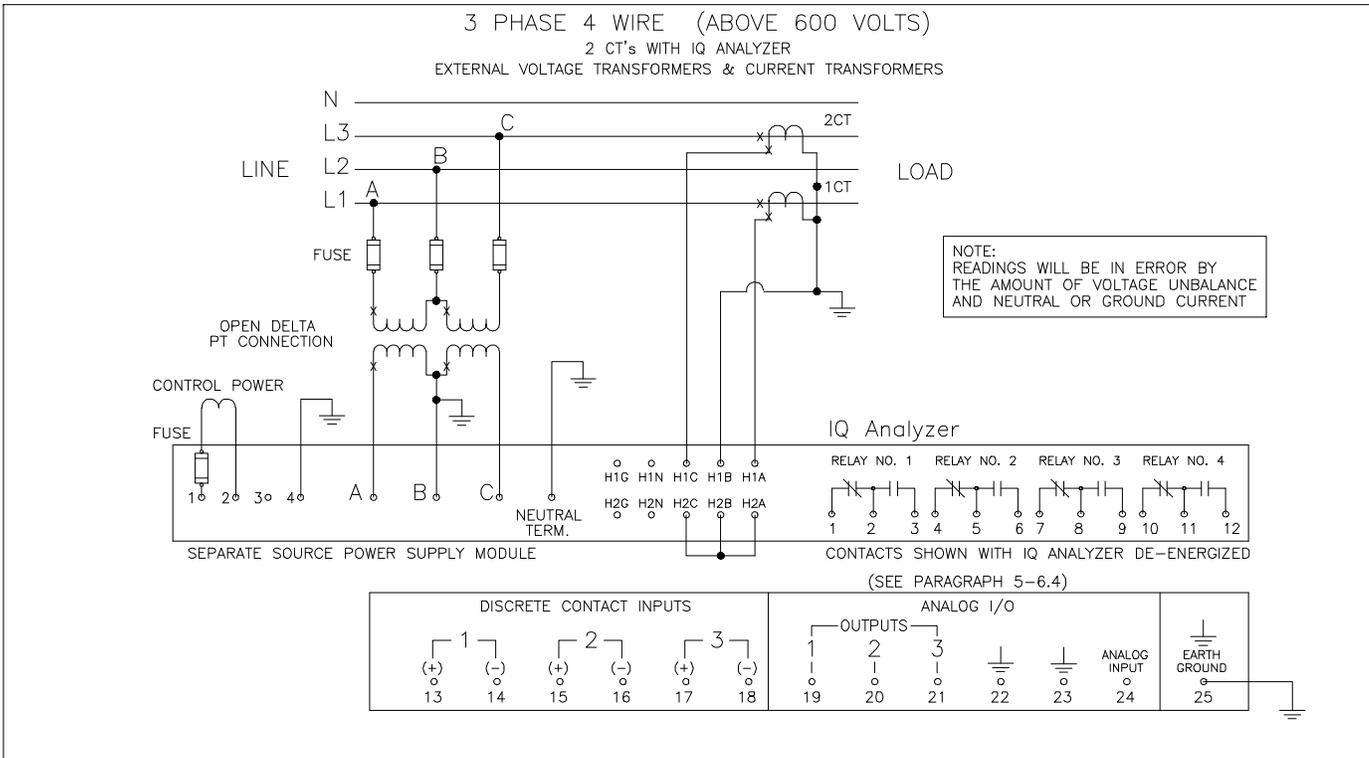


Figure 4-27. 3-phase 4-Wire (Above 600 Volts) Wiring Diagram

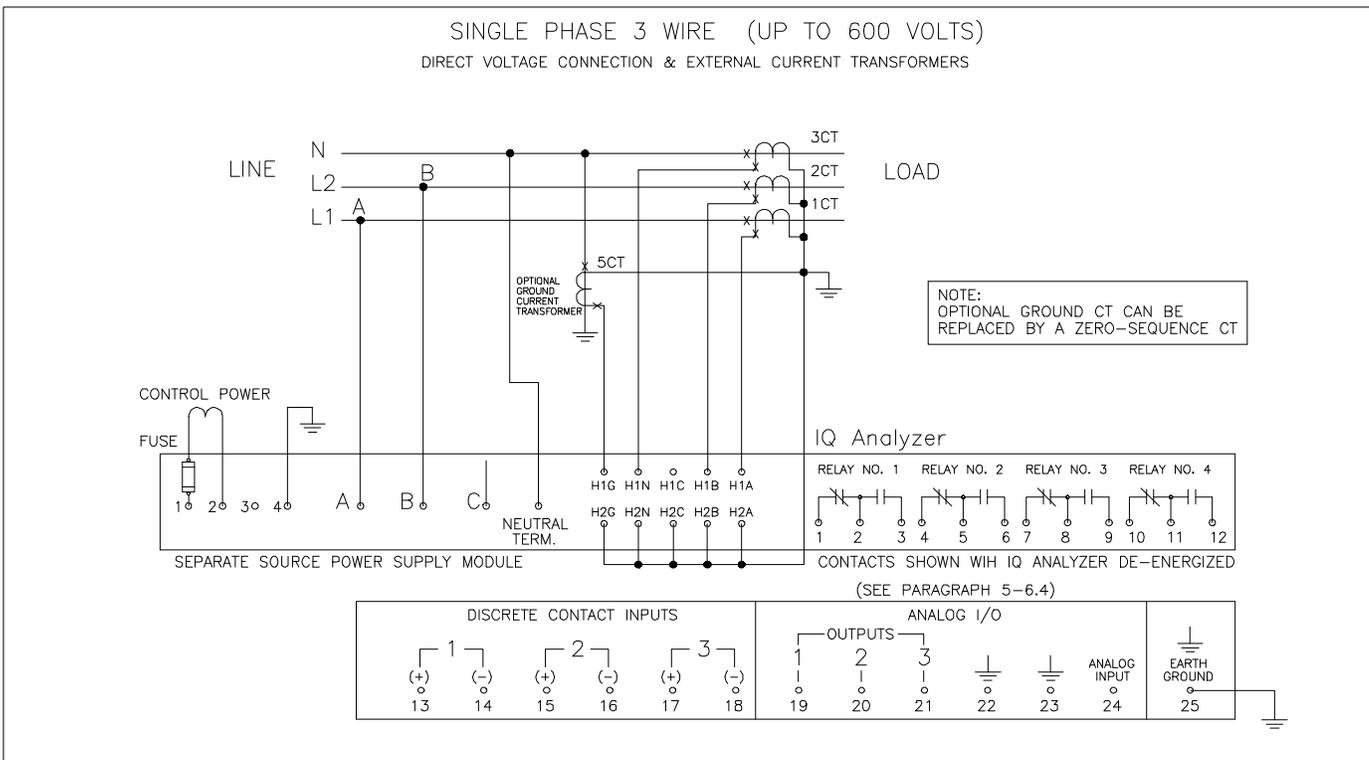


Figure 4-28. Single-phase 3-Wire (Up to 600 Volts) Wiring Diagram

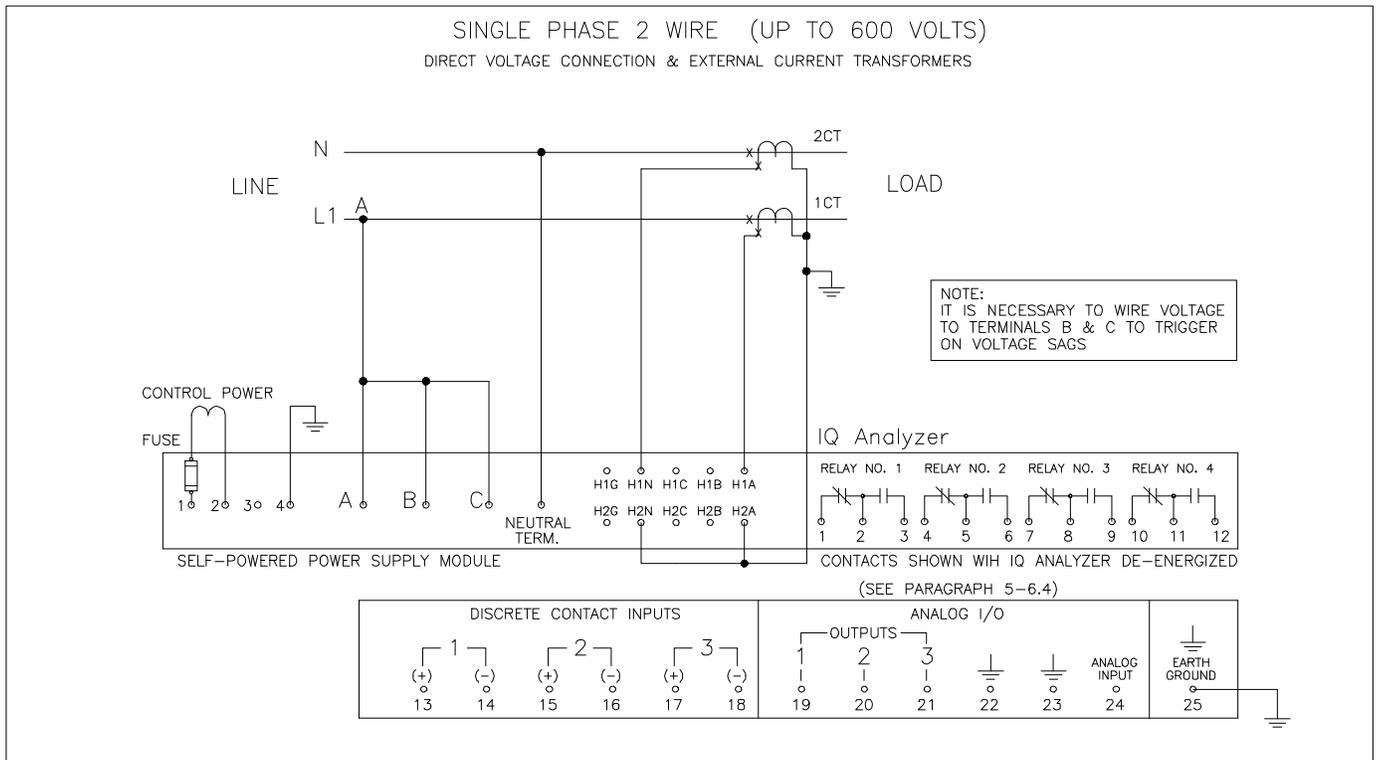


Figure 4-29. Single-phase 2-Wire (Up to 600 Volts) Wiring Diagram

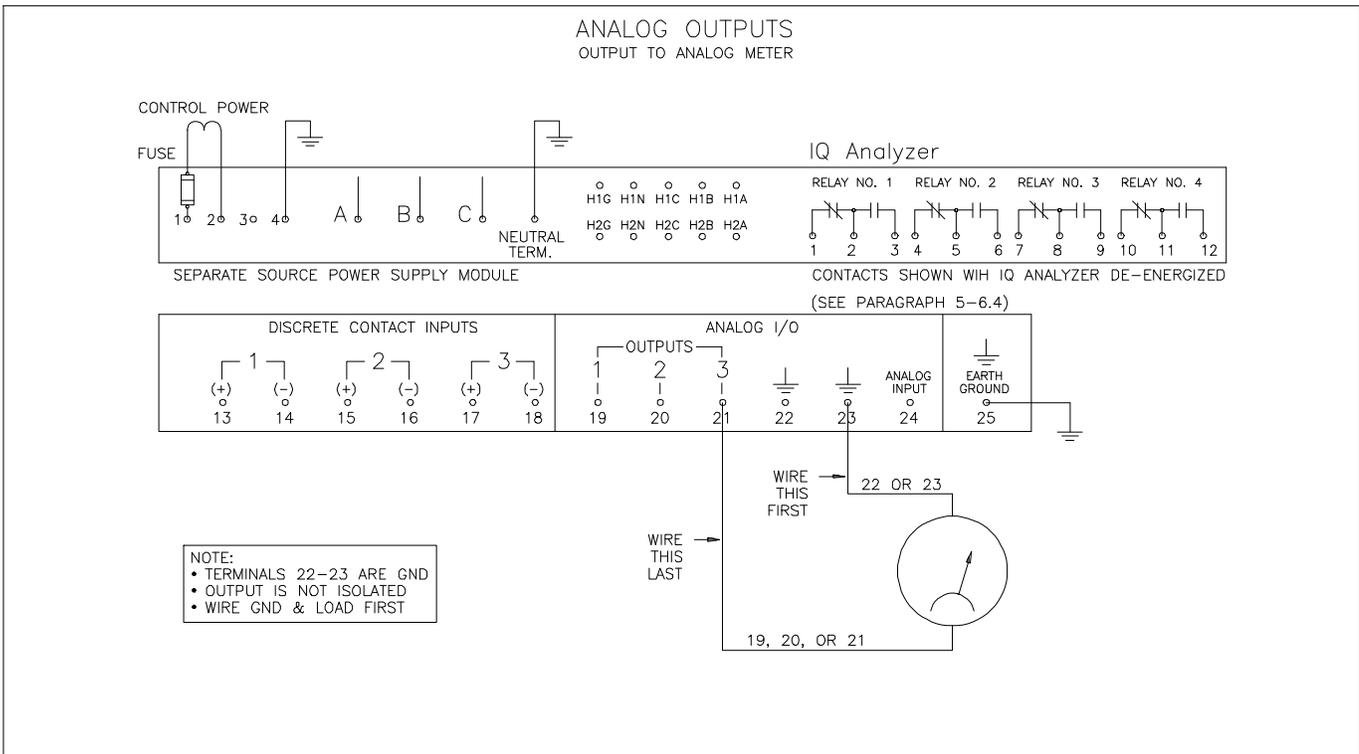
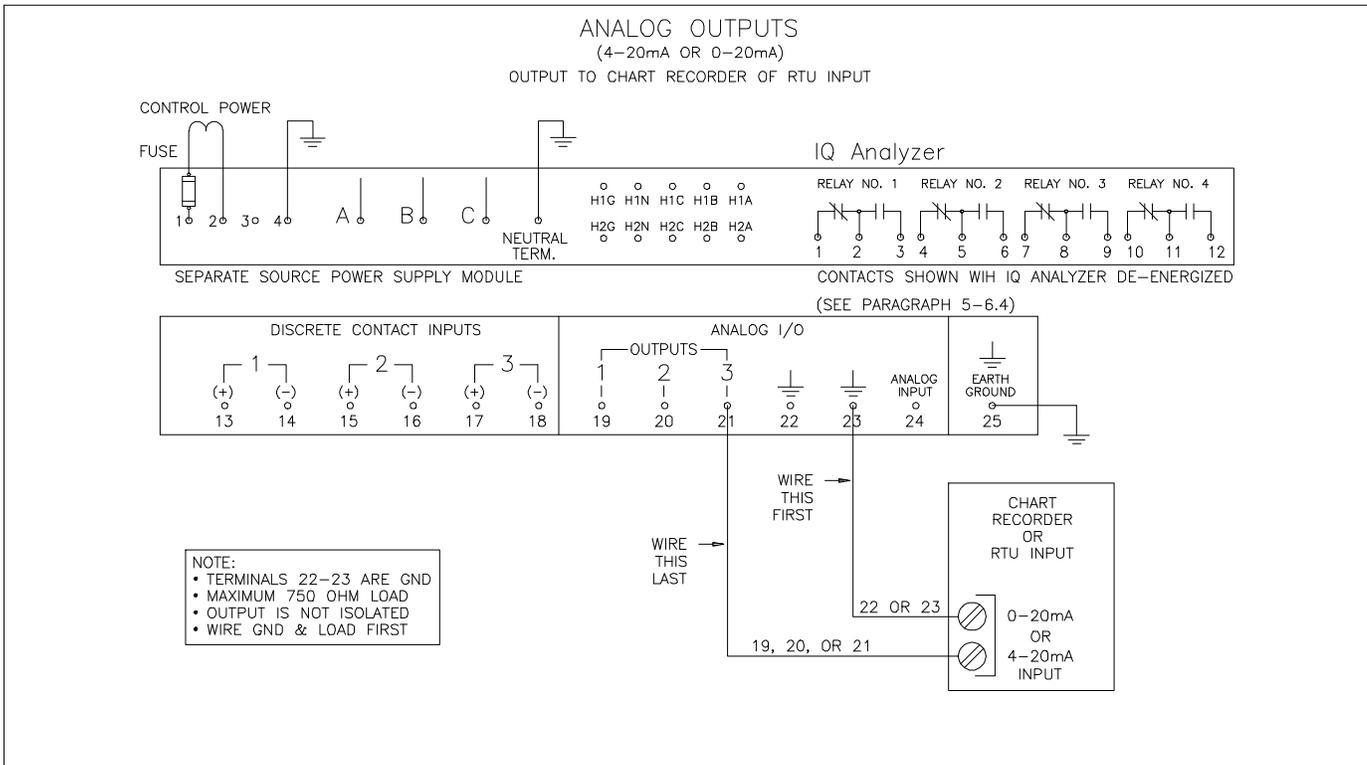


Figure 4-30. Analog Outputs

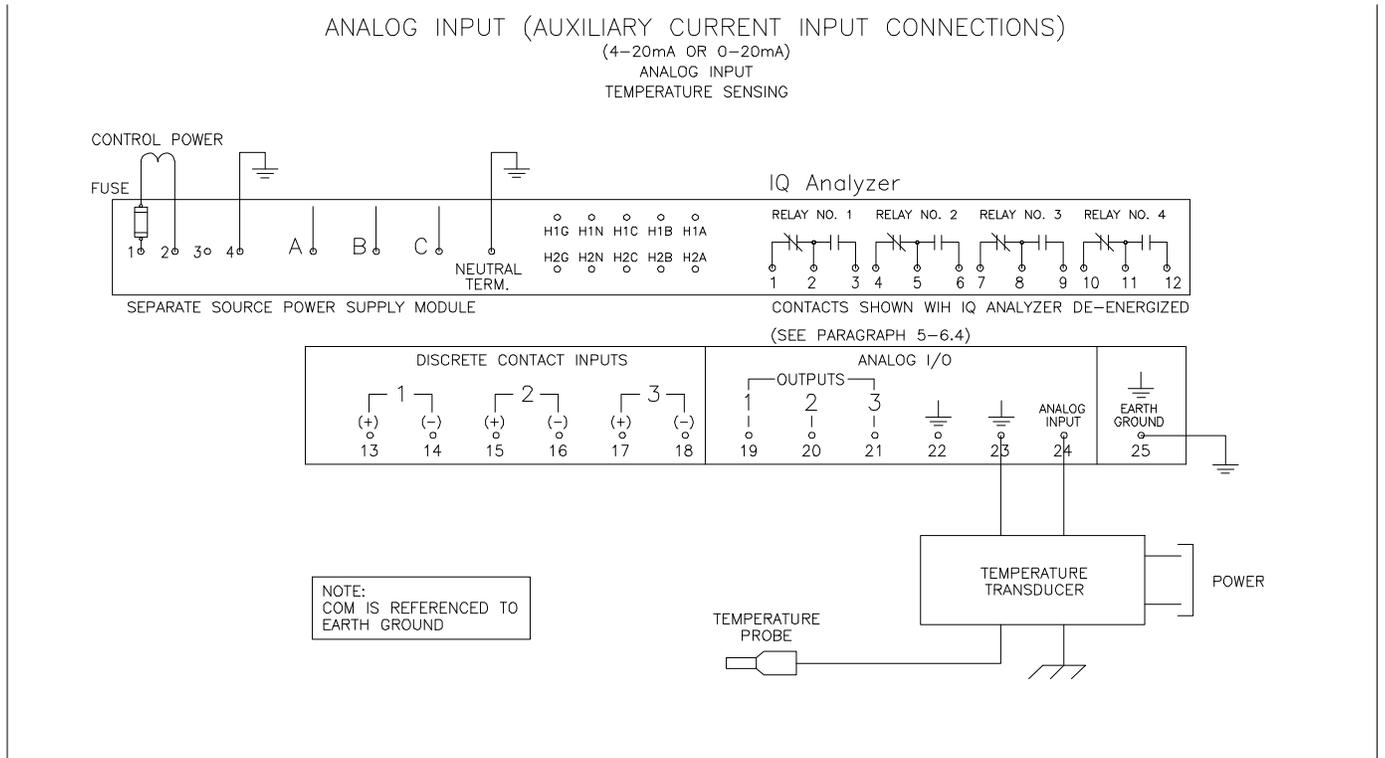


Figure 4-31. Analog Input (Auxiliary Current Input Connections)

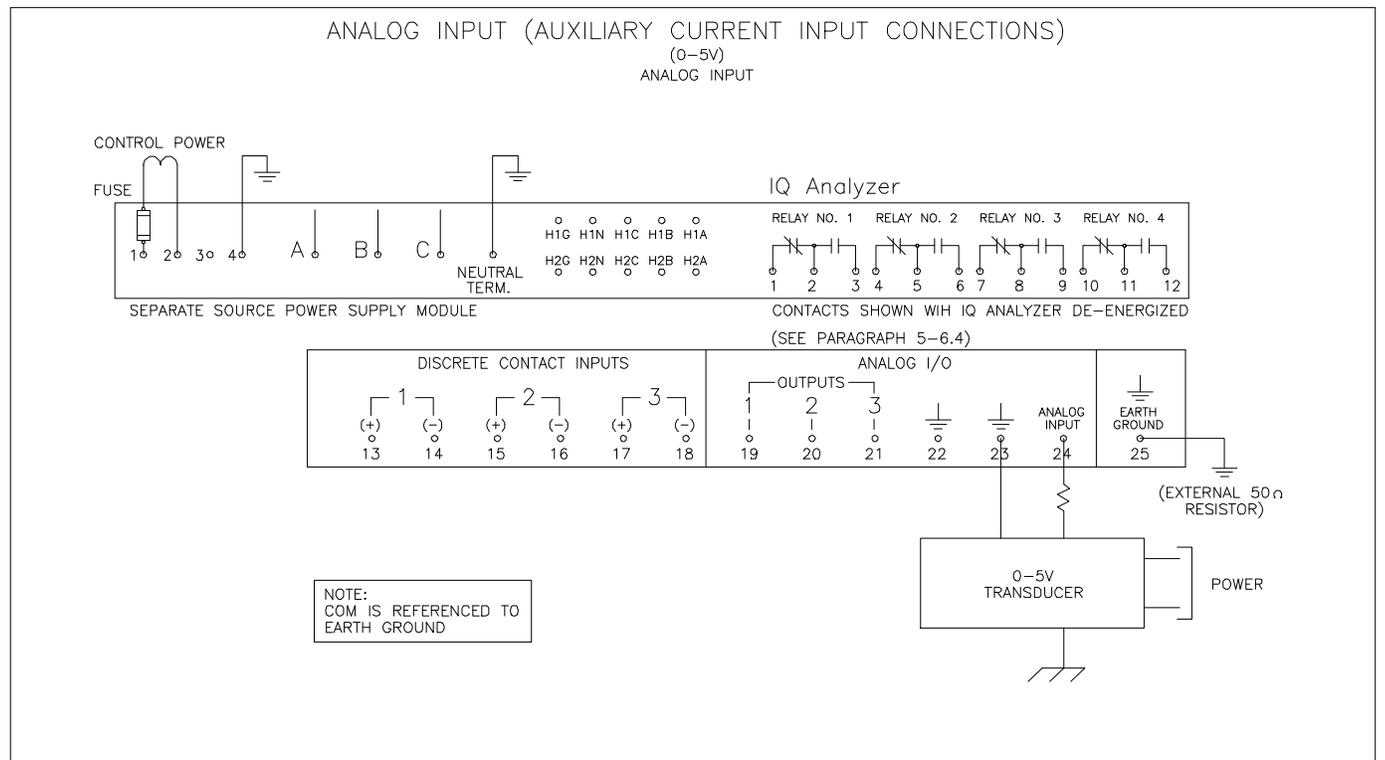


Figure 4-32. Analog Input (Auxiliary Current Input Connections)

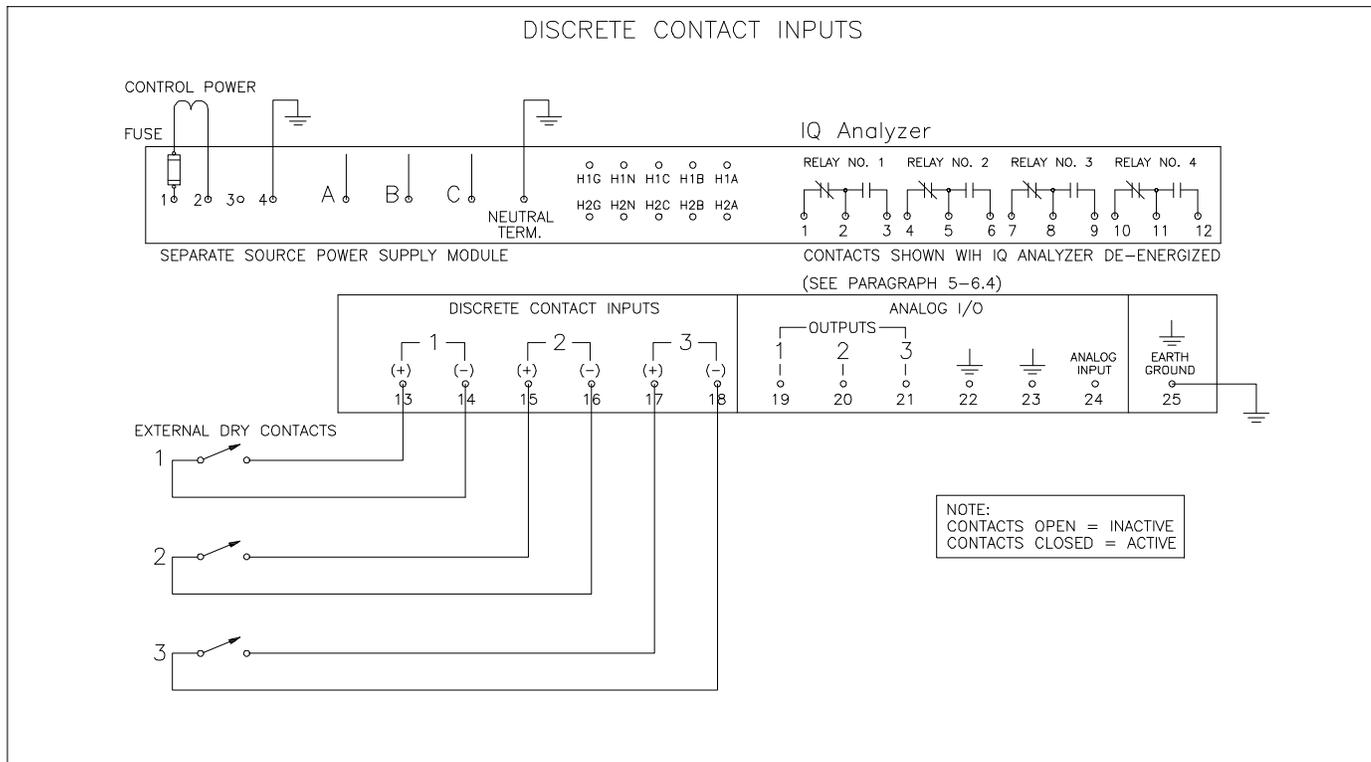


Figure 4-33. Discrete Contact Inputs

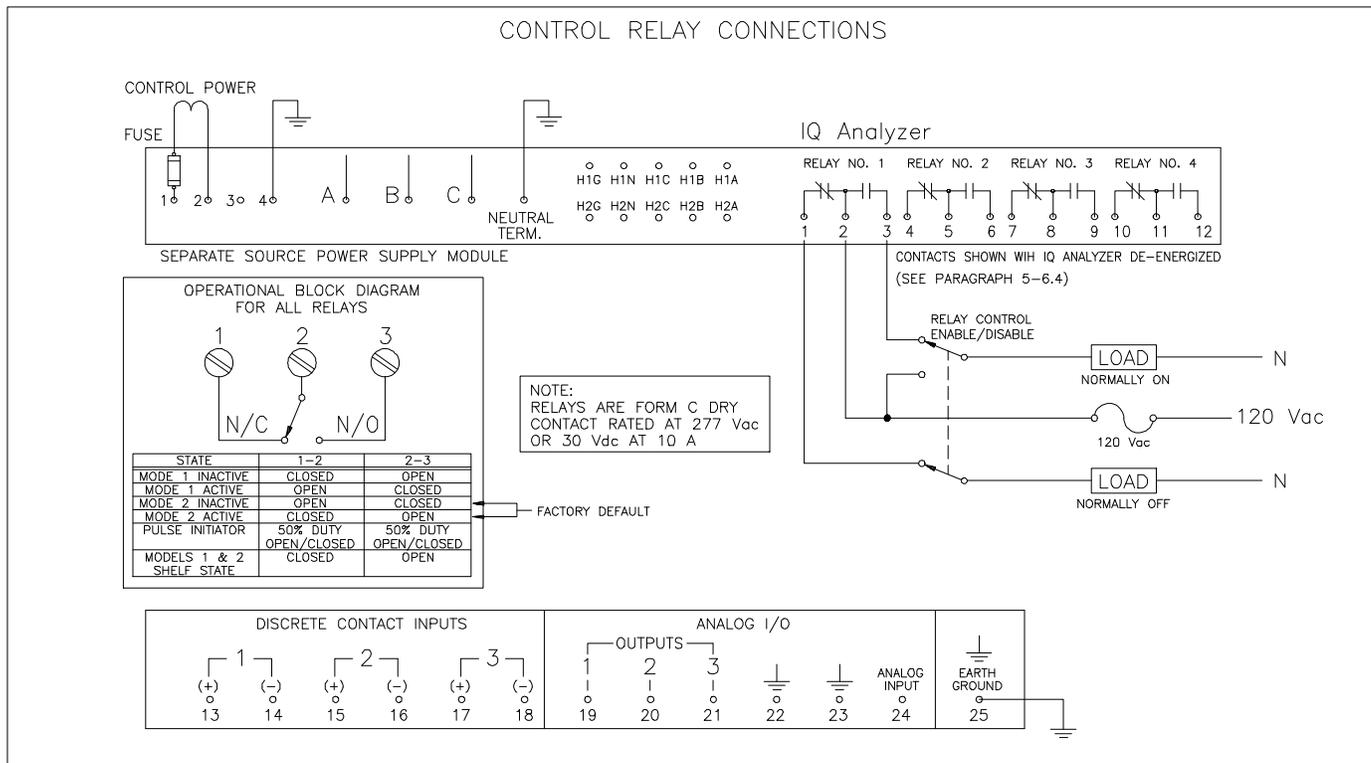


Figure 4-34. Control Relay Connections

This page left blank intentionally.